

AKASO

EK7000

A C T I O N C A M E R A



USER MANUAL

8816-V1.0

Contents

Important Messages	03	»»
Micro SD Card Use	04	»»
Notes on Using the Waterproof Housing	05	»»
1. What's in the Box	07	»»
2. Your EK7000	08	»»
3. First Use	10	»»
(1) Installing the Battery	10	
(2) Charging the Camera	10	
(3) Installing the Memory Card	10	
(4) Formatting the Memory Card	10	
4. Getting Started	12	»»
(1) Powering On or Off	12	
(2) Switching Modes	12	
(3) Capturing Photos & Videos	12	
(4) Zooming In or Out	12	
(5) Turning Audio Recording on or off	12	
(6) Accessing the Settings Screen	13	
(7) Accessing the Playback Screen	13	
(8) Turning Wifi On or Off	13	
(9) Using the Buttons	14	
5. Camera Modes Overview	16	»»
6. Customizing Your EK7000	19	»»
(1) Video Settings	19	
(2) Photo Settings	21	
(3) System Settings	22	

7. Connecting to the AKASO GO App -----	26	>>
8. Viewing and Deleting Your Content-----	28	>>
9. Transferring Your Content -----	30	>>
(1) Transferring Your Content to a Computer-----	30	
(2) Downloading Your Content to a Smartphone -----	30	
10. Battery Maintenance-----	31	>>
(1) Maximizing Battery Life -----	31	
(2) Notes-----	31	
(3) Battery Storage and Handling -----	31	
11. Remote Control -----	33	>>
(1) Connecting to the Remote-----	33	
(2) Replacing the CR2032 Battery of the Remote-----	34	
12. Mounting Your EK7000 Action Camera -----	37	>>
13. Contact Us -----	40	>>

Important Messages

Congratulations on your new AKASO EK7000 Action Camera! You must be excited to use your new camera, but please take a moment to read this manual first to get the most out of your camera's features and use it safely.

1. This camera is a precision instrument. Safeguard it from drops or impacts to prevent damage.
2. Store the camera away from devices or objects with strong magnetic fields or power, like motors and magnets.
3. Ensure the camera operates within its recommended temperature range. Avoid leaving it at high or low temperatures for extended periods, as this can reduce its lifespan.
4. The camera is not waterproof. Therefore, before submerging it in water, it is essential to place it in the waterproof housing and ensure that all covers are securely closed and that the lens area is free of debris.
6. Avoid charging the camera for long periods of time. While charging, keep the camera away from kids and pets to prevent accidents.
7. Remove the battery from the camera if you don't plan to use it for an extended period.
8. Store the camera away from sharp objects and moisture-prone areas.



Micro SD Card Use

To capture photos and videos, you'll need a memory card (sold separately). We recommend branded memory cards that meet the following criteria:

- micro SD, micro SDHC, or micro SDXC
- Rated UHS-III
- Capacity up to 256GB (FAT32)

Tips:

1. Format the memory card in the camera before using it to ensure compatibility.
2. Memory cards larger than the specified maximum capacity can cause issues like non-recognition or even camera malfunctions like unresponsiveness or firmware failure.
3. With FAT32, the card will stop recording and create a new file if the file size of a recording reaches 4GB.

Note:

1. Don't use the card near strong currents or magnetic fields.
2. Don't let the card touch metal objects, or use any metal tools on it in case it's squeezed, bent, or falls.
3. Store the card in dry places away from corrosive substances.
4. Insert the card into the card slot in the right orientation.
5. Ensure that no foreign items are inserted into the card slot.
6. Turn off the camera before inserting or removing the card.



Notes on Using the Waterproof Housing

This camera is not waterproof. Therefore, it's essential to place it in the included waterproof housing before using it in wet or underwater environments. The housing protects your camera from mud, dirt, debris, and, most importantly, water during your adventures. With the camera properly secured inside, you can safely dive up to 40 meters (132 feet) without concern.

Tip: The camera does not record sound when it's in the waterproof housing.

To maximize the potential of the waterproof case, follow these guidelines:

Before Use

1. Carefully inspect the housing for any signs of wear, cracks, or damage. Replace or repair it immediately if needed to ensure proper protection.
2. Check that all buttons on the housing function correctly and examine the rubber seal for any damage or deformities that could cause leaks.
3. Clean the camera's surface thoroughly to remove dust, dirt, or oil that could compromise the waterproof seal.
4. Once the camera is inside the housing, ensure no foreign objects are trapped around the rubber seal, and firmly close the backdoor to create a secure, watertight seal.

During Use

1. Avoid prolonged submersion to minimize potential stress on the housing and internal components.
2. Do not exceed the maximum depth rating, as excessive pressure could cause leaks or cracks, endangering your camera.

After Use

1. Rinse the housing thoroughly with fresh water after each use to remove salt, chlorine, or debris, then dry it completely to prevent stains or residue buildup.



2. Submerge the housing in clean water for 5–10 minutes, gently shaking it to help dislodge any trapped residue.
3. Clean and dry both the interior and exterior with a soft cloth, then leave it in a well-ventilated area to air dry completely before storing it.

Warm tips:

1. Before using the housing, perform a waterproof test by submerging it in shallow water to check for leaks.
2. Do not use heat sources such as hair dryers to dry the housing, as excessive heat can compromise its waterproof integrity.
3. Avoid using the housing in hot springs, while bathing, or in extreme weather conditions, as exposure to high temperatures and corrosive elements can shorten its lifespan.
4. If there are sudden temperature or humidity changes, stop using the housing to prevent condensation inside, which could affect image quality.
5. Protect the housing from strong vibrations or impacts, as these may damage the seals and compromise waterproofing.
6. Never attempt to dismantle the housing, as this may impair its waterproof performance.

1. What's in the Box



AKASO EK7000
× 1



Waterproof
Housing × 1



Battery Charger
× 1



Battery
× 2



USB Cable
× 1



Remote Control
× 1



Remote Control
Strap × 1



Protective
Backdoor × 1



Clip
× 1



Clip 2
× 1



Buckle Mount
× 1



J-Hook Mount
× 1



E Mount
× 1



C Mount
× 1



D Mount
× 1



F Mount
× 1



A Mount
× 1



H Mount
× 1



Helmet Mount
× 2



Spanner
× 1



Bandage
× 4



Tether
× 5



Lens Cloth
× 1




Double Sided
Adhesive Tape × 2




Quick Start
Guide × 1




2. Your EK7000

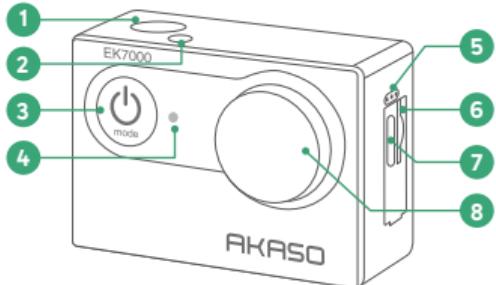

- 1 Shutter/OK Button
- 2 Working / Wifi Indicator
- 3 Power / Mode / Exit Button
- 4 Charging Indicator
- 5 Microphone
- 6 Memory Card Slot
- 7 USB-C / External Mic Port
- 8 Lens

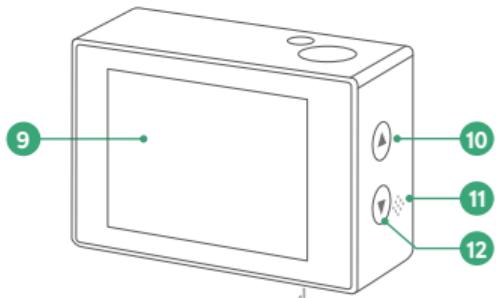

- 9 Display Screen
- 10 Up/Zoom In/Audio Button
- 11 Speaker
- 12 Down/Zoom Out/Wifi Button
- 13 1/4" Mounting Point
- 14 Battery Cover

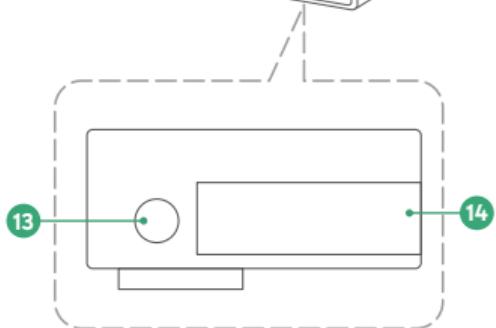



- ① Shutter/OK Button
- ② Up/Zoom In/Audio Button
- ③ Down/Zoom Out/Wifi Button
- ④ Bolt
- ⑤ Power/Mode/Exit Button

Note: The camera does not record sound when it is in the waterproof case.

3. First Use

(1) Installing the Battery

Slide down the buckle of the battery cover to open it, place the battery into the battery slot, then close the cover and push up to secure it. To remove the battery, pull the battery tab outward.

(2) Charging the Camera

Before using the camera for the first time, please fully charge the camera.

To do this, locate the USB-C power port, and connect the camera to a USB adapter (5V/1-2A only) or computer using the USB cable. The charging indicator remains red while charging and goes out when fully charged. Once charging is complete, disconnect the cable and ensure the charging cover is securely fastened.

Tip: You can also charge the battery on the battery charger before installing it onto the camera. The battery charger indicator turns red while charging and blue when fully charged.

(3) Installing the Memory Card

First locate the memory card slot, then insert the memory card with the label facing the display screen. To remove the card, simply press it into the slot with your fingernail, and it will then pop out.

Note: Be sure to turn off the camera before installation.

(4) Formatting the Memory Card

Before using, please format the memory card in the camera to ensure compatibility. Follow these steps:

Step 1: On the preview screen, press the Mode button twice.



Step 2: Use the Up/Down buttons to highlight "System Settings," then press the Shutter button to enter.

Step 3: Press the Mode button twice to switch to system settings screen, then use the Up/Down buttons to find "Format".

Step 4: Press the Shutter button to open the formatting screen. "Cancel / Confirm" will appear.

Step 5: Select "Confirm" with the Up/Down buttons, then press Shutter to start formatting.

Step 6: Wait a few seconds for the process to complete.

Note:

If the camera detects an unreadable SD card or files from another device, a message will appear: "Please format the SD card. Data will be cleared!".

Use the Up/Down buttons to select Cancel or Confirm, then press Shutter. Back up important files before confirming.

4. Getting Started

(1) Powering On or Off

To power on: With the camera off, press the Power button to turn it on. The working indicator will light blue when the camera is powered on.

To power off: With the camera on, press and hold the Power button for 3 seconds to turn it off.

(2) Switching Modes

On the preview screen, press the Mode button to switch between modes.

(3) Capturing Photos & Videos

In Photo or Video mode, press the Shutter button to capture photos or start video recording. To stop recording in Video mode, press the Shutter button again.

(4) Zooming In or Out

On the preview screen, press the Up or Down button to adjust the zoom level. Each press will zoom in or out by $0.5\times$. The camera supports up to $4\times$ zoom.

(5) Turning Audio Recording on or off

When disabled, the camera will record video without audio, and vice versa. To enable or disable this feature, press and hold Up button.

Note: This feature is available only in Video Mode. The camera does not record sound when it's in the waterproof case.



Audio Recording on



Audio Recording off




(6) Accessing the Settings Screen

From the preview screen, press the Mode button twice, then press Down twice to highlight "System Settings."

Press the Shutter button to access the camera settings screen, where you can adjust video, photo, and system settings.

To exit settings screen, press the Mode button until "  " is highlighted, then press the Shutter button.

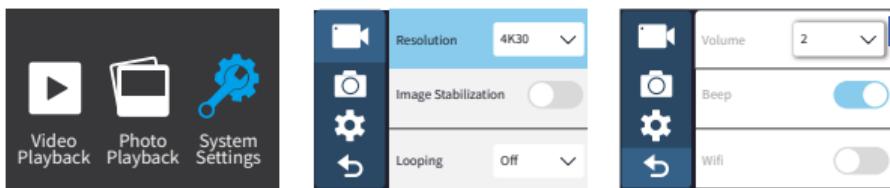


(7) Accessing the Playback Screen

From the preview screen, press the Mode button twice, then use the Up/Down buttons to highlight "Video Playback" or "Photo Playback." Press the Shutter button to enter.

In Playback mode, browse your captured videos or photos using the Up or Down buttons. Press the Shutter button to play a selected video.

To exit Playback mode, press the Mode button.

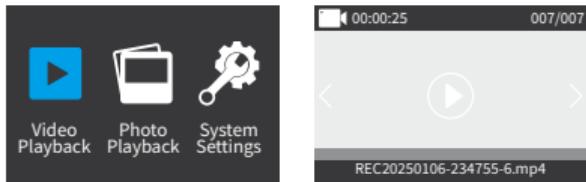


(8) Turning Wifi On or Off

The built-in Wifi connects the EK7000 camera to the AKASO GO app for camera control and file download. Please refer to the section: Connecting to the AKASO GO App

To turn on: On the preview screen, press and hold the Down button for 3 seconds to turn on Wifi. Alternatively, enter the camera's system settings screen to enable Wifi. The camera will enter Wifi mode and display Wifi information in seconds.

To turn off: On the Wifi screen, press the Down button to turn off Wifi.

Note: The display will turn off during app connection to conserve power. If the camera's Wifi is enabled but not connected to the app within 3 minutes, it will automatically turn off. Re-enable the camera's Wifi to reconnect to the app.

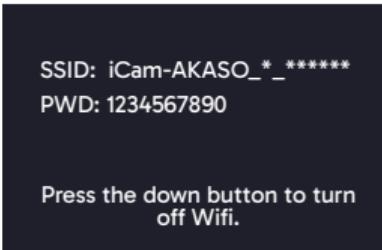

Note: If the camera's Wifi is activated but not linked to the app within 3 minutes, it will auto-disable. Re-activate the camera's Wifi to reconnect to the app.

(9) Using the Buttons

Power / Mode Button

Power On/Off: Press to turn on the camera. Press and hold to turn it off.

Preview Screen: Press to cycle between Video and Photo modes.

Settings Screen: Press to cycle through Video Settings, Photo Settings, and System Settings.

Playback Screen: Press to exit playback mode.

Shutter / OK Button

Preview Screen: Press to start or stop video recording, or to capture a photo.

Video Playback: Press to play or pause a video.

Other Screens: Press to enter a menu or confirm a selection.

Up / Audio Button 

Preview Screen: Press to zoom in. Press and hold to turn audio recording on or off.

Playback Screen: Press to browse photos or videos. Press and hold to open the delete prompt.

Other Screens: Press to scroll through options.

Down / Wifi Button 

Preview Screen: Press to zoom out. Press and hold to turn Wifi on.

Wifi Screen: Press to turn Wifi off.


Playback Screen: Press to browse photos or videos.

Other Screens: Press to scroll through options.

5. Camera Modes Overview

On the preview screen, press the Mode button to switch between Video and Photo.


To use Time-lapse Video, Interval Photo, or Burst Photo, enable the corresponding option in the camera's settings menu before recording or shooting.

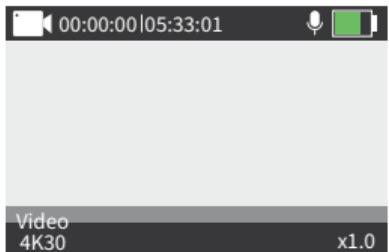

Video Mode

The camera is in Video mode by default when turned on.

In this mode, press the Shutter button to start recording a standard video at the preset resolution and frame rate. Press the Shutter button again to stop recording.

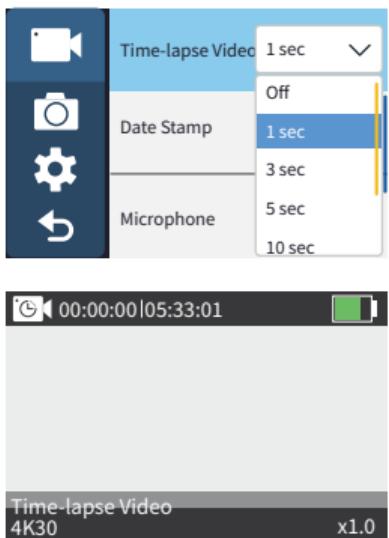

Time-lapse Video Mode

Go to Video Settings, select Time-lapse Video, choose your preferred interval, and press the Shutter button to confirm. The camera will enter Time-lapse Video mode once you return to the preview screen.

In this mode, press the Shutter button to start recording a time-lapse video based on the interval you set.

Tip: To return to standard Video mode, go to Time-lapse Video in Video Settings and select Off.


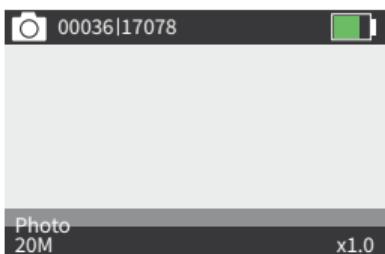




Photo Mode

On the preview screen, press the Mode button once to switch to Photo mode.

In this mode, press the Shutter button to take a photo at the preset photo resolution.

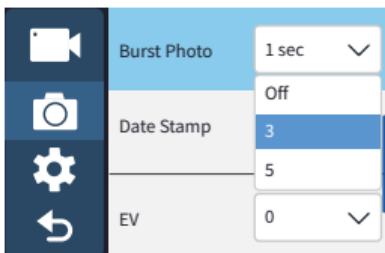


Burst Photo Mode

Go to Photo Settings, select Burst Photo, choose the number of consecutive shots, and press the Shutter button to confirm. The camera will enter Burst Photo mode when you return to the preview screen.

In this mode, press the Shutter button takes 3 or 5 photos per second, depending on your setting.

Tip: To return to standard Photo mode, go to Burst Photo in Photo Settings and select Off.

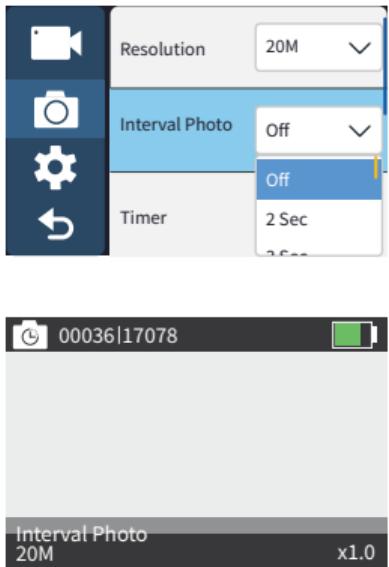

Interval Photo Mode

Go to Photo Settings, select Interval Photo, choose your preferred interval, and press the Shutter button to confirm. The camera will enter Interval Photo mode once you return to the preview screen.

In this mode, press the Shutter button starts the preset countdown and automatically takes photos at the set interval. The process continues until the preset duration ends or you press the Shutter button again to stop.

Tip: To return to standard Photo mode, go to Interval Photo in Photo Settings and select Off.

6. Customizing Your EK7000

On the settings screen, press the Mode button to switch between Video Settings, Photo Settings, System Settings, and Return.

Press the Up or Down button to scroll through options.

Press the Shutter button to enter a setting or confirm a selection.

(1) Video Settings



1. Video Resolution

4K30 (default) / 2.7K30 / 1080P60 / 1080P30 / 720P120 / 720P60

Configure the resolution settings before recording videos. The camera records up to 4K30fps videos.

2. Image Stabilization

Off (default) / On

Turn this setting on or off by pressing the Shutter button. Image Stabilization can efficiently smooth out the lens shakes, resulting in smooth and pristine videos. This feature is ideal for capturing scenes involving activities like riding, skating, and handheld use.

Note: Available only in standard video mode and cannot be used while Time-lapse Video is enabled. Disable Time-lapse Video before enabling Image Stabilization.

3. Looping Duration

Off (default) / 1 min / 3 min / 5 min

Set the loop duration for the camera to capture short video clips. The camera continuously captures up to 10 minutes of video clips. It will delete the earliest videos when the SD card is full for continuous recording.



Note: Available only in standard video mode and cannot be used while Time-lapse Video is enabled. Disable Time-lapse Video before enabling Looping Duration.

4. Time-lapse Video

Off (default) / 1 sec / 3 sec / 5 sec / 10 sec / 20 sec / 30 sec / 1 min

Enable Time-lapse Video by setting the capture interval. The camera records frames at the selected interval and automatically combines them into a short video. The final video length depends on the selected interval.

For example, recording for 30 minutes at a 3-second interval produces a 20-second video at 30 fps.

Note: Time-lapse Video is recorded without audio. It cannot be used while Image Stabilization is enabled. Disable Image Stabilization before enabling Time-lapse Video.

5. Date Stamp (Video only)

On (default) / Off

Turn this setting on or off by pressing the Shutter button. With this feature enabled, the camera will add a time watermark to your videos.

6. Microphone

Built-in (default) / External

Select either a built-in microphone or an external one. To use an external microphone for better sound quality, select "External" first. Then, connect a compatible external microphone to the camera's USB port.

Tip: This setting is only available in Video mode. If you do not wish to use an external microphone, be sure to select "Built-in" in case the camera does not properly record sound during video recording.

7. EV (Video only)

-3 / -2.5 / -2 / -1.5 / -1 / -0.5 / 0 (default) / 0.5 / 1 / 1.5 / 2 / 2.5 / 3

EV (Exposure Value) lets you adjust the brightness of your videos. A higher EV value

creates a brighter image, while a lower value results in a darker image.

8. Filters (Video only)

Normal (default) / B & W / Sepia / Negative / Warm / Cool / Red / Green / Blue

Choose an ideal filter for your videos to enhance their appeal.

(2) Photo Settings



1. Photo Resolution

20MP (default) / 16MP / 12MP / 5MP

Set the photo resolution before capturing photos. This camera is capable of capturing up to 20MP photos.

2. Interval Photo

Off (default) / 2 sec / 3 sec / 5 sec / 10 sec / 20 sec / 30 sec / 1 min

Enable Interval Photo mode by setting the interval. The camera automatically starts the preset countdown to take a photo and repeats this process continuously until you press the shutter button again.

For instance, if you select the "3 sec" option, then press the Shutter button, the camera will count down 3 seconds and take a photo, then repeat this process continuously. To stop capturing, press the Shutter button again.

Note: Interval Photo cannot be used while Timer is enabled. Disable Timer before enabling Interval Photo.

3. Timer

Off (default) / 2 sec / 3 sec / 5 sec / 10 sec / 20 sec / 30 sec / 1 min

Set the countdown time for the camera to take a photo in Photo mode.

Note: Timer cannot be used while Interval Photo is enabled. Disable Interval Photo before enabling Timer.

4. Burst Photo

Off (default) / 3 / 5

Set how many consecutive shots the camera captures with a single shutter press. This setting is perfect for capturing fast-moving activities.

Note: Burst Photo will be automatically disabled when Interval Photo or Timer is enabled. Disable Interval Photo or Timer before enabling Burst Photo.

5. Date Stamp (Photo only)

Off / On (default)

Turn this setting on or off by pressing the Shutter button. With this feature enabled, the camera will add a time watermark to your photos.

6. EV (Photo only)

-3 / -2.5 / -2 / -1.5 / -1 / -0.5 / 0 (default) / 0.5 / 1 / 1.5 / 2 / 2.5 / 3

EV (Exposure Value) lets you adjust the brightness of your photos. A higher EV value creates a brighter image, while a lower value results in a darker image.

7. Filters (Photo only)

Normal (default) / B & W / Sepia / Negative / Warm / Cool / Red / Green / Blue

Choose an ideal filter for your photos to enhance their appeal.

(3) System Settings



1. Volume

Off / 1 / 2 (default) / 3

Adjust the camera's volume to an acceptable level.

2. Beep

On (default) / Off

Turn this setting on or off by pressing the Shutter button. With this setting disabled, the camera will not emit sound when you press any function buttons, and vice versa.

3. Wifi

On / Off (default)

View Wifi name and password. Turn the camera's Wifi on by pressing the Shutter button.

4. Remote

On (default) / Off

Turn this setting on or off by pressing the Shutter button. With this setting enabled, you can pair your camera with the included remote for remote operation.

5. Anti-Flicker

50Hz / 60Hz (default)

Select the frequency for which the video recorded or played back on the TV according to your region. If you live in the northeastern area, please set the power frequency to 60Hz. If you live outside this area, set it to 50Hz. Be sure to select the correct format to avoid the light waves while capturing indoors.

6. Driving Mode

Off (default) / On

Turn this setting on or off by pressing the Shutter button.

When Driving Mode is enabled in Video Mode and the camera is plugged in, it will automatically turn on and start recording. The camera will turn off and save the footage when it is unplugged.

If the SD card becomes full, the camera will automatically delete the oldest recordings to maintain continuous recording.

Note: This feature is only available in Video mode. To ensure proper functionality, avoid using the camera in environments exceeding 45°C, such as inside a vehicle without air conditioning during summer.

7. Language

English (default) / Italiano / Español / Português / Deutsch / Français / 日本語 / 한국어 / Bahasa Indonesia / Русский / 简体中文 / 繁體中文

Set the system language that appears on the camera.

8. Date Format

YY/MM/DD | DD/MM/YY | MM/DD/YY (default)

Set a desired date format for the camera.

9. Date & Time

YY/MM/DD HH/MM/SS

Manually set your camera's date and time.

Tip: The camera's date and time will sync with your phone when it's connected to the AKASO GO App.

10. Screen Saver

Off / 30 sec / 1 min (default) / 3 min

Determine when the camera's display should go dormant to conserve battery. If you need the screen back on, just press any button.

11. Auto Power Off

Off / 1 min / 3 min (default) / 5 min

Set the duration of inactivity after which the camera automatically powers off. If not operated within the chosen duration, the camera will shut down.

12. Upside Down

Off (default) / On

Turn this setting on or off by pressing the Shutter button. This setting determines the orientation of your videos or photos to prevent upside down footage.

Note: The user interface will be upside-down when this setting is enabled.

13. Format

Cancel (default) / Confirm

Regularly reformat your memory card for optimal performance. Formatting will delete all the media files stored in the memory card. Ensure important files are saved elsewhere before proceeding.

14. Reset

Cancel (default) / Confirm

This option resets all settings to their default values.

15. About

View details about the camera, including brand, model, and firmware version.

7. Connecting to the AKASO GO App

To connect your camera to the AKASO GO App, please download this app from the App Store or Google Play to your smartphone first. When your camera is connected to the AKASO GO App, you can control it to capture, or change its settings using your phone. You can also live preview, playback, download, edit, and share videos via this app. Follow the instructions below to connect your camera to the AKASO GO App.



AKASO GO




Android



iOS

1. Turn on the camera, press and hold the Down button to turn on the camera's Wifi. The camera will enter Wifi mode and display the Wifi information.

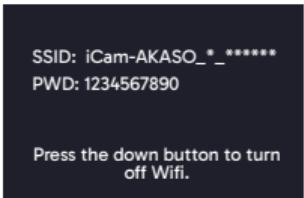


2. Enter your phone's Wifi settings page, find the Wifi named "iCam-AKASO_*_*****" in the list and tap on it, then enter the password 1234567890 for connection.

Tips:


While connecting the camera's Wifi, a "No Internet Connection" or "Weak Security" notification will appear since the phone's data is paused. However, you can proceed with the connection.



3. Open the AKASO GO App on your smartphone, then tap "Device" → "Add Device" to choose EK7000 from the options for connection.

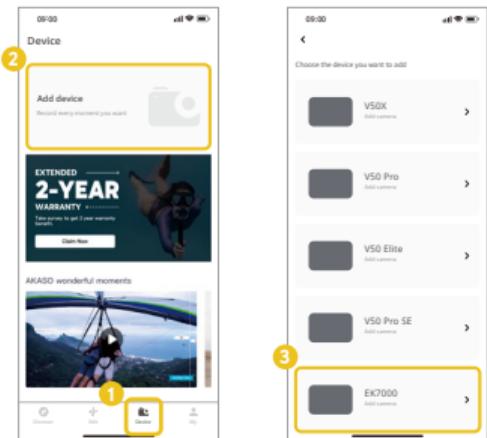

4. Tick "The above operation has been confirmed", and tap "Live Preview". Your camera will be connected to the AKASO GO app in seconds.

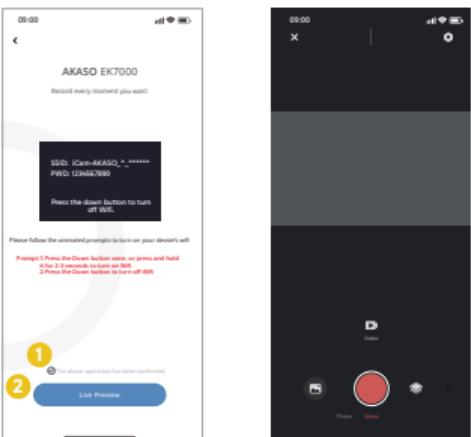

Tips:


- For a successful connection, first allow the app to access your Location and Local Network.
- If you failed to connect the camera's Wifi, please make sure you successfully turned on the camera's Wifi and stay close to the camera.

8. Viewing and Deleting Your Content

You can play back your content on the camera, your computer, TV, smartphone or tablet. You can also play back content by inserting the memory card directly into a device, such as a computer or a compatible TV. With this method, playback resolution depends on the resolution of the device and its ability to play back that resolution.

1. Enter the Playback Screen

On the preview screen, press the Mode button twice. Use the Up/Down buttons to select Video Playback or Photo Playback, then press the Shutter button to enter.

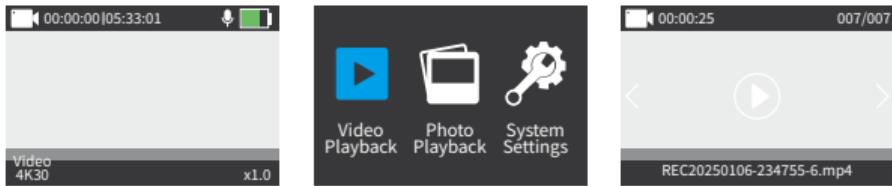

Note: If your memory card contains many files, loading may take a moment.

2. Browse Files


Use the Up/Down buttons to browse your videos or photos.

Press the Shutter button to play a video.




3. Delete a File

- ① Browse to the file you want to delete.
- ② Press and hold the Up button for 3 seconds to open the delete prompt: "Delete the selected file? Cancel/Confirm".

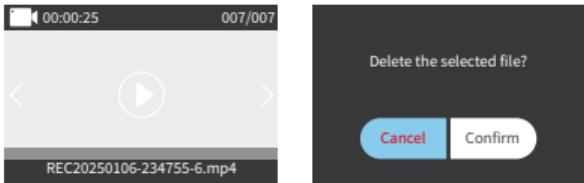

- ③ Press the Down button to highlight Confirm, then press the Shutter button to delete.

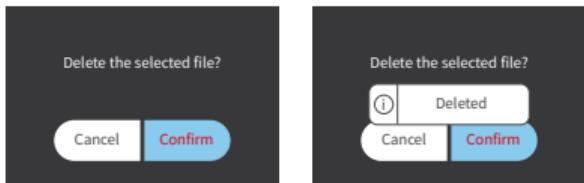

4. Exit Playback Mode

Press the Mode button.

9. Transferring Your Content

(1) Transferring Your Content to a Computer

You can transfer your content to a computer via a USB cable or a card reader (sold separately).

To transfer files to your computer via a USB cable, connect your camera to the computer's USB port using the USB cable. When prompted, select "USB Storage" as your connection preference. To transfer files to the computer using a card reader, insert a memory card into the card reader, then connect the reader to your computer's USB port. After successful transmission, you can transfer the file to your computer or delete selected files using File Explorer.

(2) Downloading Your Content to a Smartphone

1. Open the AKASO GO App, then connect it to the camera.
2. Tap the Album icon in the bottom left corner to view all the photos and videos captured by the camera.
3. Tap the Select icon located in the upper right corner. Once you have selected your desired file, tap on the Download icon in the bottom right corner and confirm the download. The file will be saved to your phone's gallery once the download completes.

Note:

1. To access files captured by the camera, first allow the app to access your phone's album in Settings → AKASO GO → Photos → All Photos.
2. Please do not alter Wifi settings or disconnect from the app during the download progress.



10. Battery Maintenance

(1) Maximizing Battery Life

1. Before using the camera for the first time, charge the battery fully and secure it in its slot.
2. To extend battery life during use:
 - Use the Screen Saver setting.
 - Capture video at lower resolutions and frame rates.
 - Turn off wireless connections when not needed.
3. Fully charge the battery before short-term storage.
4. To ensure optimal performance, replace the battery annually.

(2) Notes

1. To prevent potential damage, use only AKASO charging cables and batteries.
2. Capturing at higher resolutions or frame rates, especially in warmer conditions may cause the camera to consume more and heat up.
3. The AKASO GO app might generate extra heat and drain power faster in areas with unstable network connectivity.
4. If the camera overheats, let it cool down before using it again. Additionally, record videos at lower resolutions and frame rates or try to use features that consume less power.

(3) Battery Storage and Handling

1. For long-term storage, keep the battery at 50–60% charge. Recharge every 3 months and fully discharge every 6 month.
2. Do not store the battery with metal objects such as coins, keys, or necklaces. If the battery terminals come close to metal objects, a short circuit may cause fire.




EN

3. Store in dry areas, safe from potential physical damage caused by squeezing or collision.
4. Avoid using or storing the battery at high temperatures, such as in direct sunlight or a hot compartment. The battery will heat up, malfunction, or have its service life shortened in these conditions.
5. Avoid using or storing the battery in low-temperature environments, as this will shorten the battery life or cause it to malfunction.
6. Avoid environments with strong static or magnetic fields; these can compromise the battery's protective unit, posing safety risks.
7. If the battery emits an odor, overheats, changes color, gets distorted, or exhibits any anomalies, discontinue use and remove it immediately from the camera or the battery charger whether it is being used, charged, or stored.
8. Safely insulate used electrodes to prevent potential hazards.
9. Never discard batteries in fire to prevent the risk of explosion.

11. Remote Control

With the camera connected to the included remote, you can remotely control the camera to take photos or record videos.

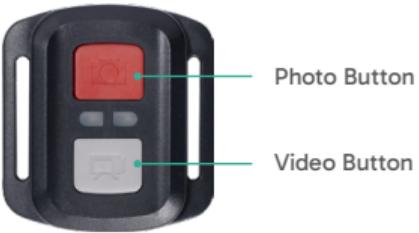

Note: The remote is splash-proof only.

(1) Connecting to the Remote

Follow the steps below to connect your camera to the remote control.

Step 1: Tap the Settings icon in the quick menu, scroll down to find the “Remote” option.

Step 2: Tap the slider to enable this feature.

Step 3: Return to the preview screen. You’re all set for the remote control.

Note: To ensure successful remote control, make sure the remote has sufficient battery charge and is used within a 10-meter range when operating your camera.

Video

To record video, first make sure the camera is in Video mode, then press the Video button. The camera's working indicator will be flashing during video recording. To stop recording, press the Video button again.

Photo

To capture a photo, first make sure the camera is in Photo Mode, then press the Photo button. The camera will emit a shutter sound indicating the completion of the shot.



Burst Photo

To capture burst photos, first verify the camera is in Burst mode, then press the Photo button. The camera will emit a shutter sound indicating the completion of the shot.

Time Lapse

To capture time lapse photos or videos, first verify the camera is in Time Lapse mode, then press the Photo or Video button. The camera will emit a shutter sound indicating the completion of the shot.

(2) Replacing the CR2032 Battery of the Remote

- ① Use a screwdriver to remove the 4 screws on the back cover of the remote, allowing you to open it.



- ② Remove another 4 screws on the remote's circuit board.



- ③ Lift the circuit board and slide out the battery, as shown below.



Note: Avoid rotating the circuit board to prevent reversing the remote control buttons.

- ④ Install the new battery, keeping the “+” pole facing up.
- ⑤ Install all the 4 screws back onto the circuit board.



- ⑥ Install all 4 screws back into the cover.

⚠️ WARNING

- **INGESTION HAZARD:** This product contains a button cell or coin battery.
- **DEATH** or serious injury can occur if ingested.
- A swallowed button cell or coin battery can cause **Internal Chemical Burns** in as little as **2 hours**.
- **KEEP** new and used batteries **OUT OF REACH** of **CHILDREN**
- **Seek immediate medical attention** if a battery is suspected to be swallowed or inserted inside any part of the body.



- a) Remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children. Do NOT dispose of batteries in household trash or incinerate.
- b) Even used batteries may cause severe injury or death.
- c) Call a local poison control center for treatment information.
- d) CR2032
- e) DC 3V
- f) Non-rechargeable batteries are not to be recharged.
- g) Do not force discharge, recharge, disassemble, heat above (manufacturer's specified temperature rating 60°C) or incinerate. Doing so may result in injury due to venting, leakage or explosion resulting in chemical burns.
- h) Ensure the batteries are installed correctly according to polarity (+ and -).
Do not mix old and new batteries, different brands or types of batteries, such as alkaline, carbon-zinc, or rechargeable batteries.
Remove and immediately recycle or dispose of batteries from equipment not used for an extended period of time according to local regulations.
Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep them away from children.

12. Mounting Your EK7000 Action Camera

Enhance your user experience by mounting the camera to various gear like helmets and more. Here's a quick guide.



=



+



=



+



=



+



=



+



=



+



+





+



+



+



+



+



+



+



WATCH
HOW TO VIDEOS

Get Extra
1-YEAR WARRANTY

Visit our website
www.akasotech.com/qsg



Watch the video to learn how to use and understand all the accessories of your AKASO action camera.

13. Contact Us

 (888) 466-9222 (US)

 cs@akasotech.com

 www.akasotech.com

For any inquiries about AKASO products, please feel free to contact us.

We will respond within 24 hours.

