
USER MANUAL

 
 
AKASO Brave 4 Action Camera

 
CONTENTS

What's in the Box	1
Your Brave 4	2
Getting Started	4
Overview of Modes	5
Customizing Your Brave 4	7
Connecting to the Camking App	13
Playing Back Your Content	13
Deleting Videos and Photos on Your Brave 4	13
Offloading Your Content	14
Maintenance Your Camera	15
Maximizing Battery Life	16
Adjusting the Zoom Level	16
Reformatting Your microSD Card	16
Battery Storage and Handling	16
Remote	17
Mounting Your Camera	20
Contact Us	21

WHAT'S IN THE BOX

			
Brave 4	Waterproof Housing	Handle Bar/ Pole Mount	Mount 1
			
Mount 2	Mount 3	Mount 4	Mount 5
			
Mount 6	Mount 7	Clip 1	Clip 2
			
Helmet Mounts	Protective Backdoor	Charger	Battery
			
USB Cable	Tethers	Lens Cloth	Bandages
			
Remote	Quick Start Guide		

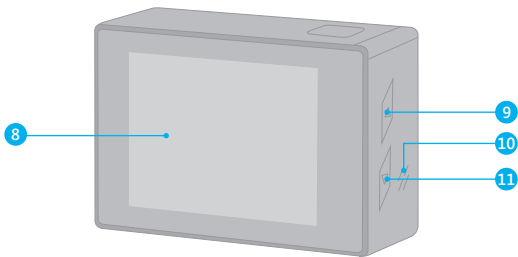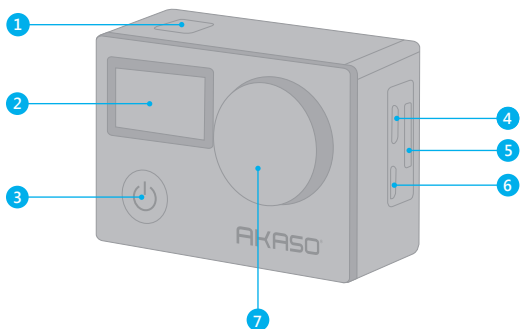

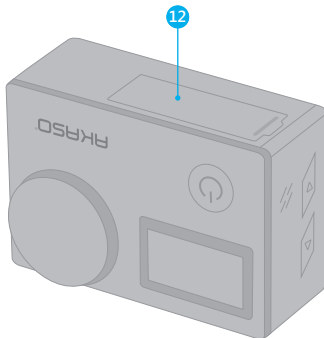

- | | |
|------------------------------|------------------|
| ① Shutter/Wifi/Select Button | ⑦ Lens |
| ② Screen | ⑧ Screen |
| ③ Power/Mode/Exit Button | ⑨ Up/Wifi Button |
| ④ Micro USB Port | ⑩ Speaker |
| ⑤ MicroSD Slot | ⑪ Down |
| ⑥ Micro HDMI Port | ⑫ Battery Door |

Note: The camera does not record sound when it is in the waterproof case.

GETTING STARTED

Welcome to your AKASO Brave 4. To capture video and photos, you need a microSD card (sold separately).

microSD CARDS

Use brand name memory cards that meet these requirements:

- microSD, microSDHC, or microSDXC
- Class 10 or UHS-I rating
- Capacity up to 64GB (FAT32)

Note:

1. Please format the microSD card first in this camera before using. To keep your microSD card in good condition, reformat it on a regular basis. Reformatting erases all of your content, so be sure to offload your photos and videos first.
2. FAT32 format microSD card stops recording when the storage of each file is over 4GB and starts to record again on a new file.

POWERING ON + OFF

To Power On:

Press and hold the Mode button for three seconds. The camera beeps while the camera status light is on. When information appears on the display or the camera status screen, your camera is on.

To Power Off:

Press and hold the Mode button for three seconds. The camera beeps while the camera status light is off.

SWITCHING MODE

To Switch Mode:

Turn on camera, press Mode button to switch mode.

To Exit Mode:

Press the Mode button to exit mode.

TURNING ON/OFF Wifi

To turn on Wifi

Turn on camera, press Up button to turn on Wifi. You can also enter Camera Setting to turn on Wifi.

To turn off Wifi

Press Up button to turn off Wifi.

OVERVIEW OF MODES

There are 4 modes: There are 4 modes: Video, Photo, Playback and Camera Setting.

Video Mode

Video Mode is the default mode when you turn on the camera.


In Video Mode, press Shutter button, the camera starts recording video. Press Shutter button to stop recording video. Press Mode Button to take a still photo when recording video. Press Up or Down button to adjust the zoom level.



Photo Mode

Press Mode button once to switch to Photo Mode after you turn on camera.

 
In Photo Mode, press Shutter button, the camera takes a photo. Press Up or Down button to adjust the zoom level.

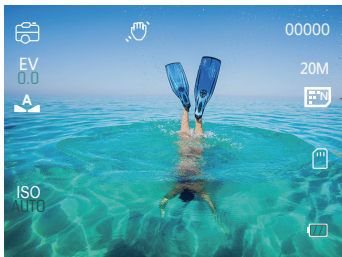

Playback Mode

Press Mode button several times to switch to Playback Mode.

 
In Playback Mode, press the Up/Down button to scroll through video or photo files.

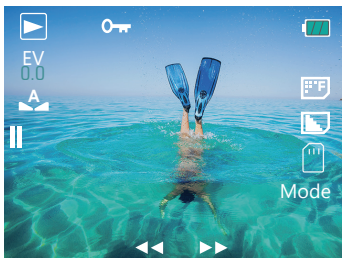

Camera Setting Mode

Press Mode button several times to switch to Camera Setting Mode. You can change camera settings in this mode.

 Note: Camera does not record sound when it is in the waterproof case.

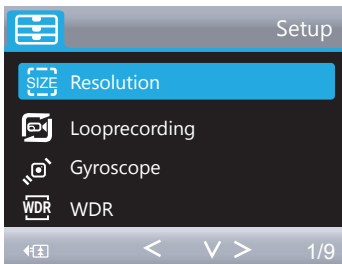

CUSTOMIZING YOUR BRAVE 4

- 1. Resolution:** 4K24FPS, 2K30FPS, 1080P60FPS, 1080P30FPS, 720P120FPS, 720P60FPS, 720P30FPS

Default setting is 1080P60FPS.

Note: When capturing video at high resolutions or high frame rates in warm ambient temperatures, the camera may become warm and use more power.

- 2. Loop recording:** Off/3 Minutes/5 Minutes/10 Minutes

Default setting is 3 minutes.

Using Loop Recording, you can continuously record video, but save only the moments that you want. For example, if you select a 5-minute interval, only the previous 5 minutes are saved when you press the Shutter button to stop recording. If you record for 5 minutes and do not press the Shutter button to stop recording and save, the camera records a new 5-minute interval by recording over your previous 5 minutes of footage. When the microSD card is full, the new files will cover the old one if loop recording is on.

3. Gyroscope: Off/On

Default setting is off.

This setting adjusts the footage to offset for motion during capture. The result is smoother footage, especially in activities with relatively small but fast motion including cycling, motorcycling, and handheld uses.

4. WDR: Off/On

Default setting is on.

Wide Dynamic Range (WDR) retains a greater level of detail in the dark and bright areas of an image. The result is a photo that is properly exposed for both of these extremes. This setting is especially useful for scenes that are backlit or that have large bright regions and a dark foreground. WDR is available in Video mode only.

5. Time-lapse Record: Off/100ms/200ms/500ms/1 Sec/5 Seconds

Default setting is off.

Time Lapse Video creates video from frames captured at specific intervals. This option lets you capture a time lapse event and immediately view or share it as a video. Time Lapse Video is captured without audio.

6. Motion Detection: Off/On

Default setting is off.

Motion detection is the process of detecting a change in the position of an object relative to its surroundings or a change in the surroundings relative to an object.

Turn on Motion Detection and camera, the camera records video automatically when it detects a change in the position of an object relative to its surroundings.

7. Record Audio: Off/On

Default setting is on.

Turn off Record Audio, the camera does not record audio when you record video.

Note: Press Down button, the camera does not record sound when you record video.

8. Date Stamp: Off/On

Default setting is on.

Turn on Date Stamp, this camera adds date stamp to the videos and photos you take.

9. Angle: 170°, 140°, 110°, 70°

Default setting is 170°.

The angle refers to how much of the scene (measured in degrees) can be captured through the camera lens. 170°angle captures the largest amount of the scene, while 70°angle captures the least.

10. Diving mode: Off/On

Default setting is off.

Turn on Diving Mode, it can compensate for the lack of red light in underwater scenes.

Diving Mode is designed to be used in tropical and blue water, optimized for use between 10 and 80 feet.

11. Special Effects: Off/Night Scene/Portrait/Lightpainting

Default setting is off.

12. Self Timer: Single/2S Timer/5S Timer/10S Timer

Default setting is single.

A Self Timer gives a delay between pressing the shutter release and the shutter's firing. It is most commonly used to let photographers to take a photo of themselves (often with family).

13. Image Size: 20M/16M/12M/10M/8M/5M/3M/VGA 640x480

Default setting is 20M.

14. Burst: Off/Burst3/Burst5/Burst10

Default setting is off.

Burst captures up to 10 photos in 1 second, so it is perfect for capturing fast-moving activities.

15. Quality: Fine/Normal/Economy

Default setting is Normal.

16. Sharpness: High/Normal/Medium

Default setting is Normal.

Sharpness controls the quality of details captured in your video footage or photos. When you change this setting, the touch display immediately shows you the effect on your image.

17. White Balance: Auto/Daylight/Cloudy/Tungsten/Fluorescent

Default setting is Auto.

White Balance lets you adjust the color temperature of videos and photos to optimize for cool or warm lighting conditions. When you change this setting, the display immediately shows you the effect on your image.

18. Color: Natural/Black & White/Sepia

Default setting is natural.

19. ISO: Auto/100/200/400

Default setting is Auto.

ISO determines the camera's sensitivity to light, and creates a trade-off between brightness and resulting image noise. Image noise refers to the degree of graininess in the image.

In low light, higher ISO values result in brighter images, but with greater image noise.

Lower values result in lower image noise, but darker images. When you change this setting, the display immediately shows you the effect on your image.

20. Exposure Value: +2.0, +1.7, +1.3, +0.7, +0.3, 0, -0.3, -0.7, -1.0, -1.3, -1.7, -2.0

Default setting is 0.

By default, your camera uses the entire image to determine the appropriate exposure level. However, Exposure lets you select an area that you want the camera to prioritize when determining exposure. This setting is particularly useful in shots where an important region might otherwise be over- or underexposed.

When you change this setting, the display immediately shows you the effect on your image. If you change modes, the camera returns to using the entire scene to determine the correct level of exposure.

21. Anti-Shaking: Off/On

Default setting is On.

This setting adjusts the footage to offset for motion during capture. The result is smoother footage, especially in activities with relatively small but fast motion including cycling, motorcycling, and handheld uses.

22. Protect: Lock Current, Unlock Current, Lock All, Unlock All

Default setting is Lock Current.

23. Wifi: Off/On

Default setting is Off.

Note: You can also press Up button to turn on Wifi in Video mode.

24. Date/Time: YY/MM/DD

The date and time are automatically updated when you connect your camera to the AKASO DV App. However, you can manually change these settings, if needed.

Note: If the battery is removed from the camera for an extended period of time, the date and time will be reset automatically.

25. Auto Power Off: Off/1Minute/3Minutes/5Minutes/10Minutes

Default setting is 3 minutes.

Powers off your Brave 4 after a period of inactivity to save battery life.

26. Beep Sound: Off/On

Default setting is On.

Sets the volume of your Brave 4's alerts.

27. Voice Prompt: Off/On

Default setting is on.

Turn on Voice Prompt, the camera will say "Video Start" when you start recording video.

The camera will say "Video Stop" when you stop recording video. The camera will say 'Photograph' when you take photo.

28. OSD: Off/On

Default setting is On.

OSD (On Screen Display) is a feature of action cameras that displays video or photo resolution, date, time and setting data on the camera screen.

29. Car ACC: Off/On

Default setting is Off.

If you turn on Car ACC (Driving Mode) and connect camera with car cigarette lighter, the camera will turn on automatically if you start your car and will turn off if you stop your car.

30. Language: English/Français/Deutsch/Español/Italiano/Português/Русский/日本語/ 简体中文/ 繁體中文/ Polski

31. Screen Save: Off/30 Sec/1 Minute/3 Minutes

Default setting is 1 Minute.

Turns off the display after a period of inactivity to save battery life. To turn on the display again, press any button on the camera.

32. Frequency: 50Hz/60 Hz

Default setting is 50 Hz.

33. Format

To keep your microSD card in good condition, reformat it on a regular basis. Reformatting erases all of your content, so be sure to offload your photos and videos first.

To reformat your card, press the mode button to enter camera setting, then press Up button several times to enter Format > SD Card > All data will be deleted > Cancel/OK.

34. Default Setting: Return menu setting to defaults Cancel OK

This option resets all settings to their default values.

35. Version: Brave 4 Version: IPS7789-V3 20180702

You can check the model, version and updated time of your Brave 4.

CONNECTING TO THE CAMKING APP

The Camking app lets you control your camera remotely using a smartphone or tablet. Features include full camera control, live preview, playback, download, sharing of content and setting camera.

1. Download Camking app to your mobile device from the Apple App Store or Google Play.
2. Turn on the camera, then enter Camera Setting to turn on Wifi. You can also press Up button to turn on Wifi when the camera is in Video Mode.
3. Turn on Wifi of your mobile device, connect to the Wifi SSID 'AKASO'.
4. Enter the password: 1234567890.
5. Open the Camking app.

Note: You can also download AKASO DV App if Camking app does not work.

PLAYING BACK YOUR CONTENT


You can play back your content on the camera's display, your computer, TV, or smartphone/tablet.

You can also play back content by inserting the microSD card directly into a device, such as a computer or compatible TV. With this method, playback resolution depends on the resolution of the device and its ability to play back that resolution.

VIEWING VIDEOS AND PHOTOS ON YOUR BRAVE 4

1. Enter Playback mode. If your microSD card contains a lot of content, it might take a minute for it to load.
2. Press the Up/Down button to scroll through the video or photo files.

DELETING VIDEOS AND PHOTOS ON YOUR BRAVE 4

1. Enter Playback mode. If your microSD card contains a lot of content, it might take a minute for it to load.
2. Press Up/Down button to scroll through the video or photo files.
3. Press and hold Up or Down button for three seconds. The screen shows the  icon.
4. Press OK button. The screen shows "Delete Current/Delete All".
5. Press OK button again. The selected file will be deleted.
6. To exit Playback mode, press Mode button.




OFFLOADING YOUR CONTENT

 
 
OFFLOADING YOUR CONTENT TO A COMPUTER

 
 
To play back your video and photos on a computer, you must first transfer these files to a computer. Transferring also frees up space on your microSD card for new content.

To offload files to a computer using a card reader (sold separately) and your computer's file explorer, connect the card reader to the computer, then insert the microSD card. You can then transfer files to your computer or delete selected files on your card. Note that you must use a card reader to offload photos or audio files.

OFFLOADING YOUR CONTENT TO SMARTPHONE OR TABLET

1. Open the Camking app.
2. Tap Folders icon  at the bottom of the screen.
3. Tap the photo or video file you want to download.
4. Tap .
5. The screen shows "Downloading the selected files, please don't interrupt". Then tap "OK".
6. Turn on the switch at the top of the screen.
7. Tap the photo or video file you want to download to your phone or tablet.
8. Tap , then tap "Save Image".

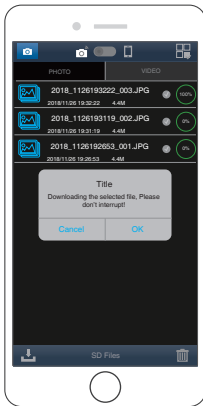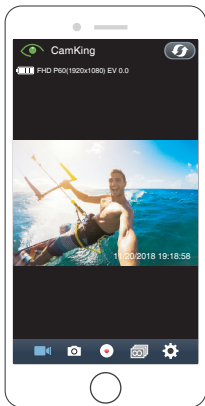

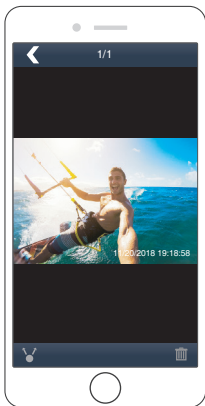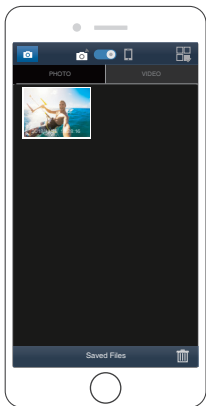

Note:

1. If you cannot offload videos or photos to iPhone or iPad, please enter Setting → Privacy → Photos , find "CamKing" and select "Read and Write".
2. Iphone and iPad does not allow you to download 4K or 2.7K video via Wifi app.
3. Please offload 4K or 2.7K videos via card reader.

MAINTENANCE YOUR CAMERA

Follow these guidelines to get the best performance from your camera:

1. For best audio performance, shake the camera or blow on the mic to remove debris from the microphone holes.
2. To clean the lens, wipe it with a soft, lint-free cloth. Do not insert foreign objects around the lens.
3. Don't touch the lens with fingers.
4. Keep the camera away from drops and bumps, which may cause damage to the parts inside.
5. Keep the camera away from high temperature and strong sunshine to avoid being damaged.

MAXIMIZING BATTERY LIFE

If the battery reaches 0% while recording, the camera saves the file and powers off.

To maximize battery life, follow these guidelines when possible:

- Turn off Wireless Connections
- Capture video at lower frame rates and resolutions
- Use Screen Saver setting.

ADJUSTING THE ZOOM LEVEL

The Zoom function lets you adjust how close or far away the subject appears in your photo. The default is no zoom. Zoom function is available in Video and Photo Mode. Brave 4 can 5X zoom.

1. Turn on Brave 4.
2. Enter Video or Photo Mode.
3. Press and hold Up or Down button to adjust the zoom level.

REFORMATTING YOUR MICROSD CARD

To keep your microSD card in good condition, reformat it on a regular basis. Reformatting erases all of your content, so be sure to offload your photos and videos first.

1. Press and hold Mode button for 3 seconds to turn on Brave 4.
2. Press Mode button three times to enter Camera Setting.
3. Press UP / Down button to find the 'Format' option.
4. Press Shutter button, the screen shows 'SD Card.'
5. Press Shutter button, the screen shows 'All data will be deleted Cancel / OK'
6. Press Down button then Shutter button. The screen shows 'Please wait'. Then you format your microSD card successfully.

 
BATTERY STORAGE AND HANDLING

The camera contains sensitive components, including the battery. Avoid exposing your camera to very cold or very hot temperatures. Low or high temperature conditions may temporarily shorten the battery life or cause the camera to temporarily stop working properly. Avoid dramatic changes in temperature or humidity when using the camera, as condensation may form on or within the camera.

- Do not dry the camera or battery with an external heat source such as a microwave oven or hair dryer. Damage to the camera or battery caused by contact with liquid inside the camera is not covered under the warranty.
- Do not store your battery with metal objects, such as coins, keys or necklaces. If the battery terminals come in contact with metal objects, this may cause a fire.
- Do not make any unauthorized alterations to the camera. Doing so may compromise safety, regulatory compliance, performance, and may void the warranty.

WARNING: Do not drop, disassemble, open, crush, bend, deform, puncture, shred, microwave, incinerate or paint the camera or battery. Do not insert foreign objects into the battery opening on the camera. Do not use the camera or the battery if it has been damaged - for example, if cracked, punctured or harmed by water. Disassembling or puncturing the battery can cause an explosion or fire.

REMOTE

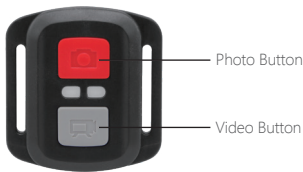

Splashproof only, not waterproof

VIDEO

To record Video, verify the camera is in Video mode.

To start recording:

Press the Grey Video Button. The camera will emit one beep and the camera light will flash while recording.

To stop recording:

Press the Grey Video Button again. The camera will emit one beep and the camera light will stop flashing while recording.

PHOTO

To capture a photo, verify the camera is in Photo mode.

To take a photo:

Press the Red Photo Button. The camera will emit a camera shutter sound.

CR2032 BATTERY REPLACEMENT FOR BRAVE 4 REMOTE

1. Use a 1.8mm Phillips tip screwdriver to remove the 4 screws on the back cover of the remote, allowing you to open it.



2. Remove another 4 screws on PCB board.



3. Lift the PCB board and slide out the battery, as shown in the picture.

Note: Do NOT rotate the PCB board to avoid reversing the camera and video button functions.



4. Install the new battery, keeping the "+" pole facing up.

 
5. Install all 4 screws back onto the PCB board.



6. Install all 4 screws back into the cover.

MOUNTING YOUR CAMERA

Attach your camera to helmets, gear and equipment.

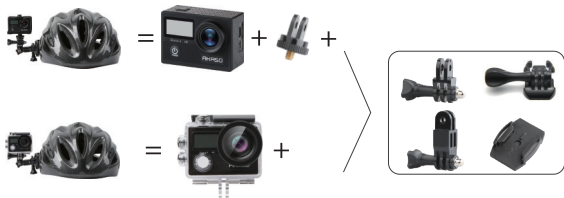



CONTACT US

For any inquiries with AKASO products, please feel free to contact us, we will respond within 24 hours.

E-mail: cs@akasotech.com

Tel: (888) 466-9222 (US) Mon-Fri (except holiday) 9am-5pm (EST)

Official website: www.akasotech.com

The microSD, microSDHC, microSDXC and SD marks and logos are trademarks of SD-3D, LLC.