USER MANUAL

AKASO Keychain Camera

AKASO

v1.5

English 01 - 21

日本語 22 - 42

EN

CONTENTS

What's in the Box	2
Your Keychain Camera	3
Getting Started	4
Standalone Use	5
Overview of Operation and Camera Status	6
Downloading the AKASO GO App	9
Connecting to the AKASO GO App	9
Customizing Your Keychain Camera in the AKASO GO App	11
Mounting Your Keychain Camera	19
Updating the Camera Firmware	20
Q&A	20
Contact Us	21

What's in the Box



AKASO Keychain Camera * 1

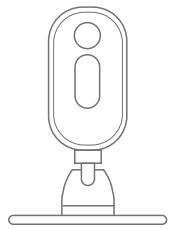

Pivot Stand and Mount Base * 1

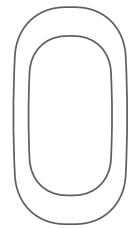

Carry-on Camera Case * 1

Magnet Base * 1

Easy Clip * 1

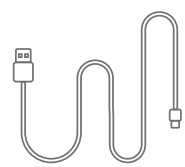

Type-C Charging Cable * 1

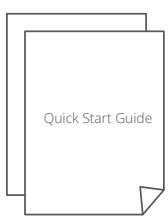

Quick Start Guide * 1

Your Keychain Camera

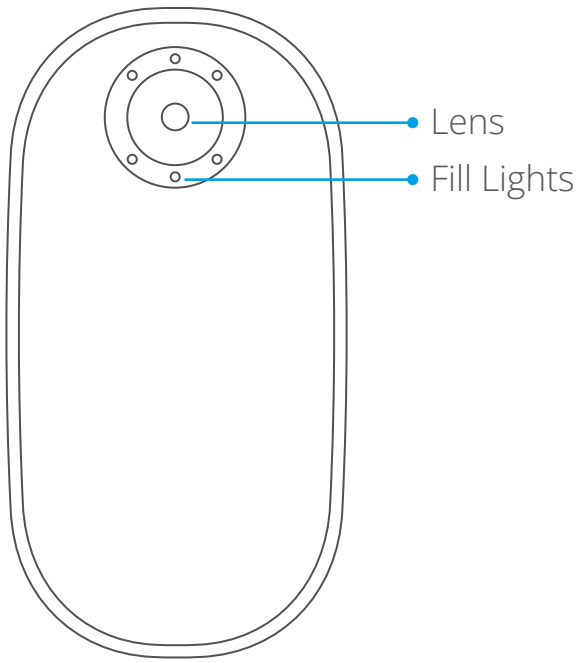

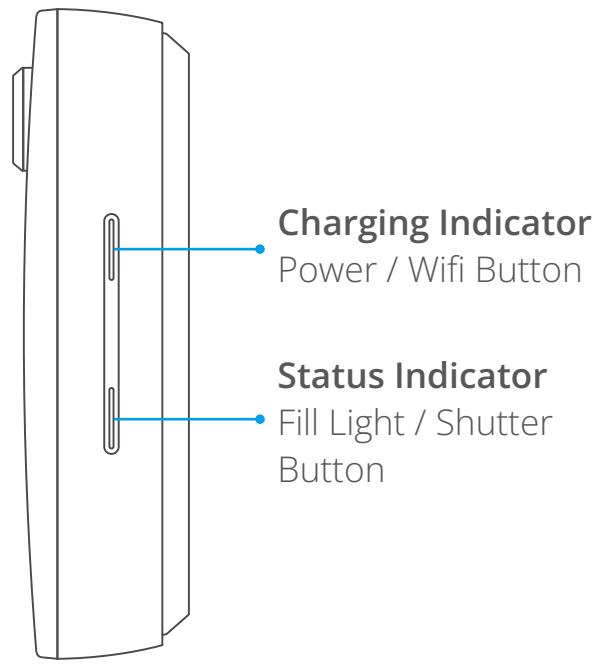

Tip: The black Keychain does not have the Fill Light feature.

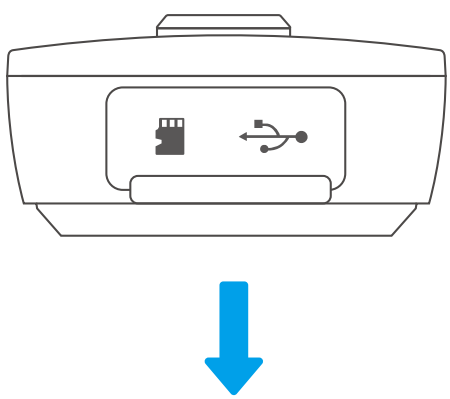

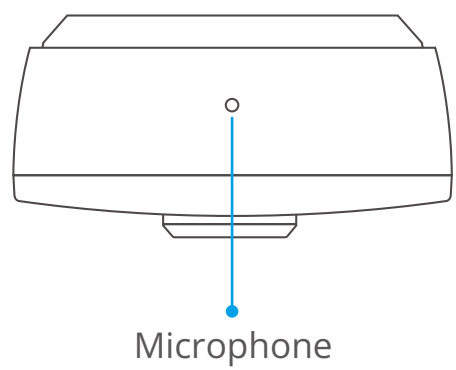

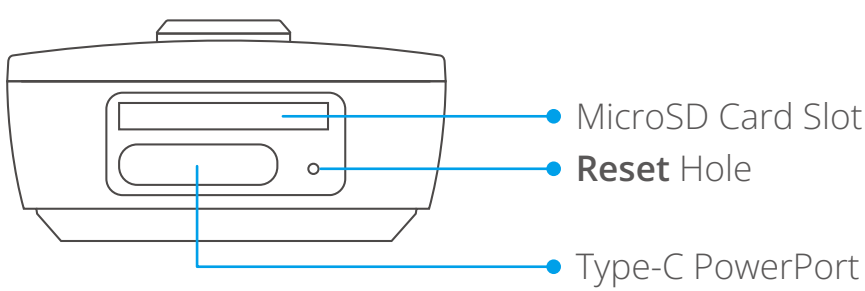

Getting Started

1. Charging the Keychain Camera

To get the most of your new camera, we recommend you fully charge it before first use. To charge the camera, open the charging cover to reveal the charging port, and connect the camera to a USB adapter or computer using the included USB cable.

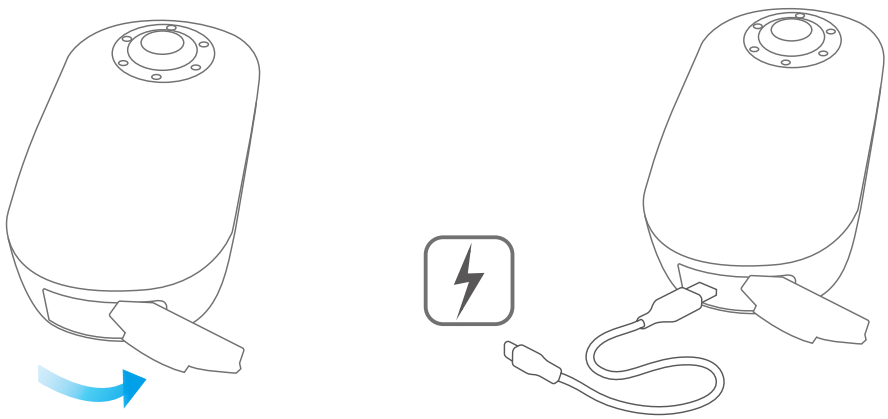

Once fully charged, disconnect the cable and ensure the charging cover is securely fastened. The indicator will remain red while charging and black out when fully charged. While charging the camera via a computer, ensure that computer is connected to a power source. If the status light does not turn on, use a different USB port instead.

Note: The battery cannot be detached from the camera. Do not attempt to disassemble it, as this may pose a safety risk.

2. Installing or Removing the Memory Card

- To insert the memory card (sold separately), open the charging cover to reveal the memory card slot, then insert it in the orientation shown and close the cover.

Note: Be sure to turn off the camera before installation.

- To remove the card, gently press it inwards with your fingernail, and it will then pop out.

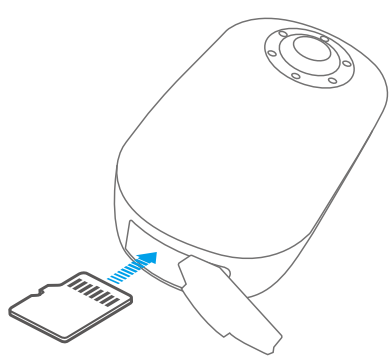

Please use SAMSUNG, Kingston, SanDisk, etc. microSD cards that meet these requirements:

- microSD, microSDHC or microSDXC.
- U3 rating.
- Capacity up to 64GB (FAT32).

Note:

1. Don't use the card near strong currents or magnetic fields.
2. Don't let the card touch metal objects, or use any metal tools on it case it's squeezed, bent, or falls.
3. Store the card in dry places away from corrosive substances.
4. Insert the card into the card slot in the right orientation.
5. Ensure that no foreign items are inserted into the card slot.
6. Turn off the camera before inserting or removing the card.

Standalone Use

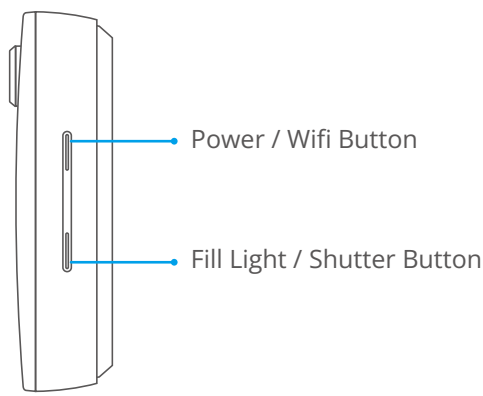

Powering On and Off

Powering On: While the camera is off, press and hold the Power button to turn it on. The Keychain camera will vibrate for 2 seconds with the blue indicator at the bottom remaining on.

Powering Off: While the camera is on, press and hold the Power to turn it off. The Keychain camera will vibrate for 2 seconds times with the blue indicator turning off.

Tip: The Keychain camera will shut down automatically if no operation is applied within the preset auto shutdown time.

Turning Wifi On or Off

In Standby mode, press the Wifi button to turn on Wifi. The yellow indicator at the top will be flashing slowly.

To turn off Wifi, press the Wifi button, and the yellow indicator will black out.

Note: If the camera's Wifi is activated but not linked to the app within 1 minute, it will auto-disable. Re-activate the camera's Wifi to reconnect to the app.

Turning Fill Light On or Off

In Standby mode, press and hold the Fill Light button for at least 2 seconds to turn Fill Light on or off.

Tips: The black Keychain camera does not have the Fill Light feature.

Using the Shutter Button

In Standby mode, press the Shutter button to start recording video. The blue indicator will be flashing slowly. Press it again to stop capturing the video.

Tip: The The Keychain camera is in Video mode by default when turned on. It can also remember the video mode enabled on the app last time.

Overview of Operation and Camera Status

Camera Status	Operation	Camera Status Change	Light Status Change	Camera Vibration	Notes
Powering on	Press and hold the Power button	Power-off → Standby Mode	All lights off → The blue remains on	Keeps vibrating for 2 seconds	
Wifi On	Press the Power button	Standby Mode → Wifi on but not connected	The yellow off → The yellow flashes slowly	Vibrates once	Wifi SSID: SNK-C_XXXX Wifi PWD: 1234567890
Wifi Auto Off	Not linked to the Phone app within 2 minutes	Not connected to the device Wifi within 2 minutes → Standby mode	The yellow flashes slowly → The yellow off	Vibrates once	
Turn Off Wifi	Press the Power button	Wifi on but not connected to the phone app → Wifi off	The yellow flashes slowly → The yellow off	Vibrates once	
Wifi Connected	Connect the phone to the camera's Wifi	Wifi on but not connected to the phone app → Wifi connected	The yellow flashes slowly → The yellow remains on	/	
Turn off Wifi when connected	Press the Power button	Wifi connected to the phone app → Wifi off	The yellow remains on → The yellow off	Vibrates once	

Camera Status	Operation	Camera Status Change	Light Status Change	Camera Vibration	Notes
In Photo / Burst Photo / Time Lapse Photo Mode	Tap the red Shutter icon on the app to take photos	Wifi connected to the phone app → Shooting	The blue remains on → The blue quickly flashes twice	Vibrates once	You can take photos only via the app.
In Video / Loop Recording / Time Lapse Video / Slow Motion Video Mode	Press the Shutter button on the camera or tap the red Shutter icon on the app to start recording	Standby mode → Recording	The blue remains on → The blue flashes slowly	Vibrates once	The camera's video mode defaults to the mode enabled on the app last time. For instance, if you enabled Loop Recording on the app, the camera will default to Loop Recording mode when disconnected from the app. If you wish to record time lapse video, simply enable Time Lapse Video mode on the app.
Video recording failed	Press the Shutter button	Standby mode → Recording failed	The blue remains on → The blue quickly flashes 3 times	Vibrates 3 times	The camera can fail to record when no card is inserted, recognized or memory is full. To fix this issue, insert a recommended memory card, format the card after data backup or replace the card with a new one.
Turn on Fill Light	Press and hold the Fill Light button or enable on the app	Fill Light On	Fill Light off → Fill Light Remains on	/	The black Keychain camera does not have the Fill Light feature.
Turn off Fill Light	Press and hold the Fill Light button or disable on the app	Fill Light Off	Fill Light remains on → Fill Light off	/	
Charging	Connect the camera to a USB cable	The camera is being charged.	The red at the top lit up	/	

Camera Status	Operation	Camera Status Change	Light Status Change	Camera Vibration	Notes
Update firmware on the app	Follow the on-app prompts or instructions to conduct firmware update	Wifi connected → Updating firmware → Auto turn off upon completion	The blue at the bottom flashes quickly during the progress → The blue blacks out upon completion	No vibration during the progress	Before conducting the firmware upgrade, ensure the camera is charged up to 50% with a recommended card inserted. It's recommended you leave the camera plugged in to protect the firmware update package from damage caused by low battery.
Auto Power off	/	No operation is applied when in standby mode → Power off	The blue remains on → The blueblacks out	Keeps vibrating for 2 seconds	Ensure Auto Power Off is enabled via the app.
Low Battery	/	Power off in any conditions	Blue & Yellow Lights flashes quickly → Lights black out	Vibrates twice → Keeps vibrating for 2 seconds	To maximize battery life, capture at lower resolution and frame rate, turn off Wifi or Fill Light when not needed.
Power off	Press and hold the Power button	Camera turned off	Lights out	Keeps vibrating for 2 seconds	

Downloading the AKASO GO App

To sync your camera with the app, download the AKASO GO app from the App Store (iOS) or Google Play (Android) by searching for “AKASO GO”.

Connecting to AKASO GO App

To set up your Keychain camera or view the camera’s status, you need to connect App features include camera control, live preview, playback, download, and settings. Follow the steps below to connect your cameara to the AKASO GO app.

1. In Standby mode, press the Power button to turn on the device Wifi.
2. Enter your phone’s Wifi settings page, find the Wifi SSID named "SNKCXXXX" in the list and tap on it, then enter the password 1234567890 for connection.
3. Open the AKASO GO app, tap “Device”→“Add Device”, and select “Keychain” from the list for connection.
4. Tick "The above operation has been confirmed", and tap "Live Preview".
5. Your camera will be connected to the AKASO GO app in seconds.

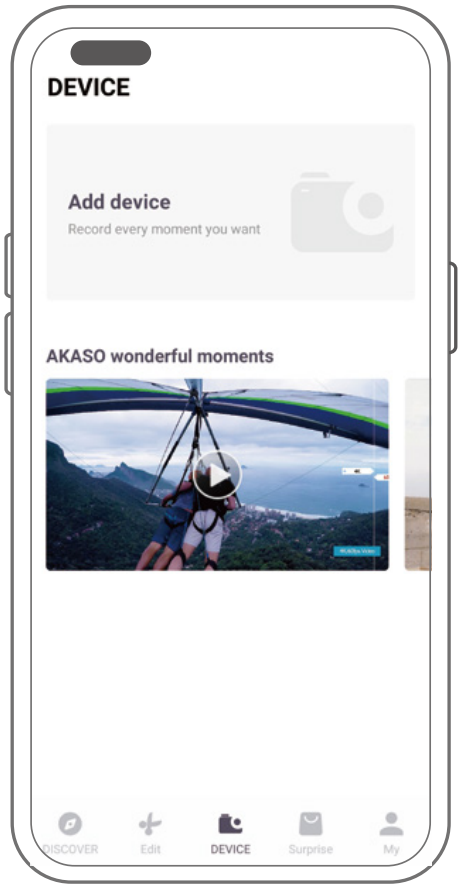
DEVICE
Add device
Record every moment you want
AKASO wonderful moments
DISCOVER
Edit
DEVICE
Surprise
My

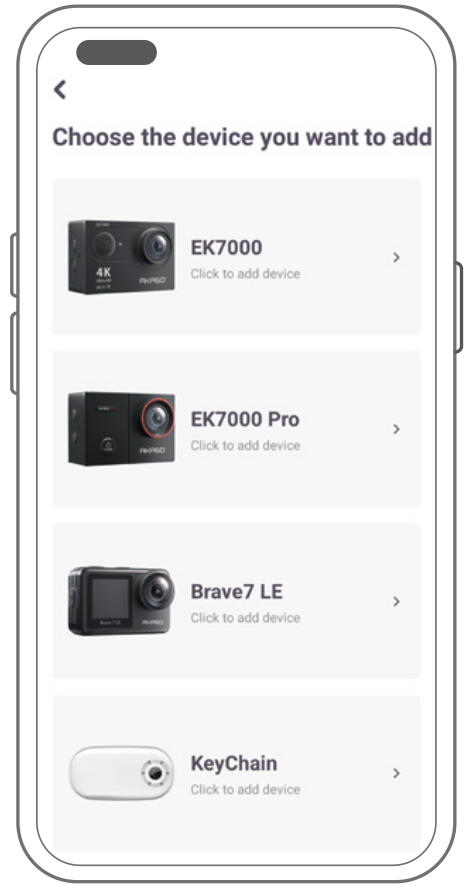
Choose the device you want to add
EK7000
Click to add device
EK7000 Pro
Click to add device
Brave7 LE
Click to add device
KeyChain
Click to add device

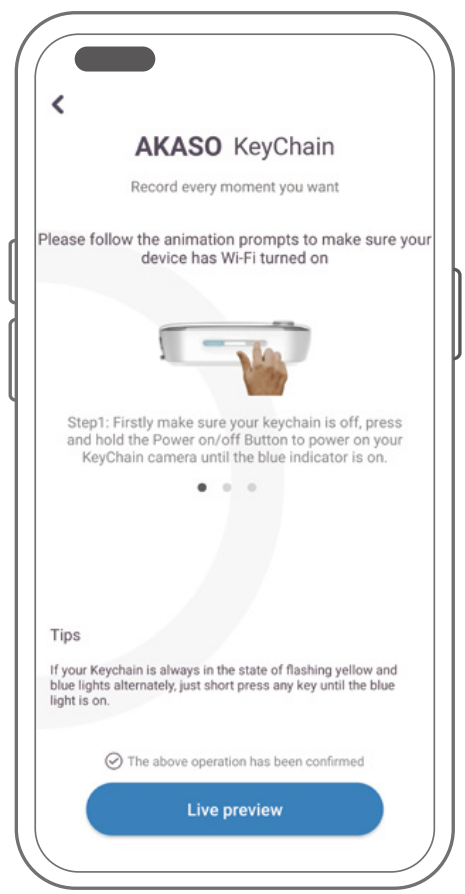
AKASO KeyChain
Record every moment you want
Please follow the animation prompts to make sure your device has Wi-Fi turned on
Step1: Firstly make sure your keychain is off, press and hold the Power on/off Button to power on your KeyChain camera until the blue indicator is on.
Tips
If your Keychain is always in the state of flashing yellow and blue lights alternately, just short press any key until the blue light is on.
The above operation has been confirmed
Live preview

Once you have successfully connected your Keychain to the app, you can view the camera's status, switch shooting modes, capture photos or videos, configure settings, access your recorded files, and perform OTA upgrade on the AKASO GO app.

App Preview Screen

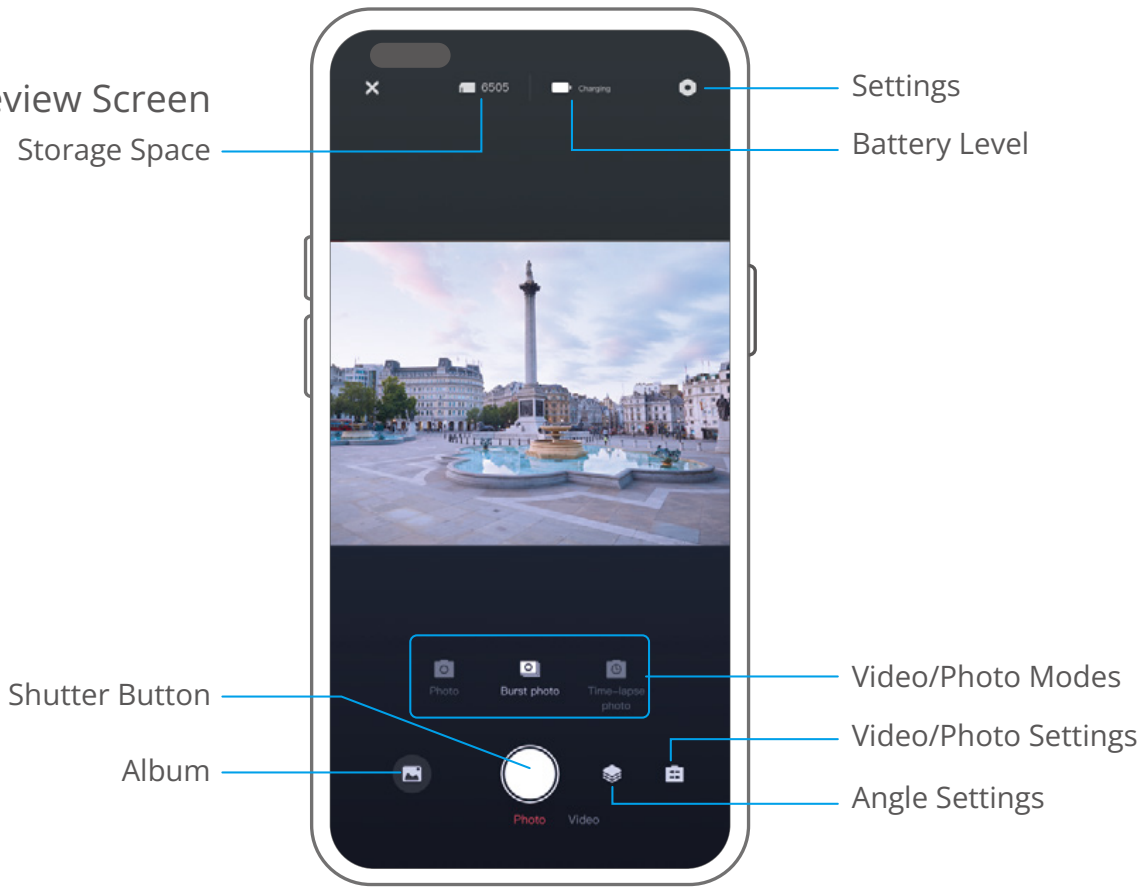

Note: The screenshot provided is for your reference only.

Customizing Your Keychain on the AKASO GO App

1. Video Settings

Video Modes	Video Resolution
Video	4k30fps, 2.7k30fps, 2.7k60fps, 1080P60fps, 1080P30fps, 720P120fps, 720P60fps
Loop Recording	4k30fps, 2.7k30fps, 2.7k60fps, 1080P60fps, 1080P30fps, 720P120fps, 720P60fps
Time Lapse Video	4k30fps, 2.7k30fps, 2.7k60fps, 1080P60fps, 1080P30fps, 720P120fps, 720P60fps
Slow Motion Video	1080P60fps, 720P120fps, 720P60fps

Video Mode

The camera is in Video mode by default when turned on.
In this mode, press the Shutter button to record normal video at the preset resolution and frame rate. Press the Shutter button again to stop recording. Note:
Note: Capturing videos in warm environments in high resolutions and frame rates will consume more power.

Loop Recording Mode

1 Min / 3 Min / 5 Min (Default setting: 1 Min.)
In this mode, press the Shutter button to record video of the set length. When the MicroSD card is full, the camera will automatically delete the earliest videos to continue recording. For example, if the "1 Min" option is selected, the camera will create video clips of 1 minute in length. A 1 minute clip will be deleted when memory is full.

Time Lapse Video

1 Sec / 3 Sec / 5 Sec / 10 Sec / 30 Sec /1 Min (Default setting: 1 Sec.)
In Time Lapse Video mode, press the Shutter button to create video clips by capturing frames at the set interval.
Note: Time Lapse Video is captured without audio.

Slow Motion Video

In this mode, press the shutter button to record a slow-motion video at the set resolution and speed. The video is recorded at a playback speed of 30 fps, providing a captivating slow-motion effect during playback.

Wind Noise Reduction

Off / On (Default setting: Off)
Turn on Wind Noise Reduction to minimize the wind noises produced in fast-moving movements.

Image Stabilization

Off / Basic Image Stabilization / SuperSmooth

Off: Turn off Image Stabilization.

Basic Image Stabilization (EIS 2.0)

Off / On (Default setting: Off)

Image Stabilization can efficiently smooth out the lens shakes, resulting in smooth and pristine videos. This feature is ideal for capturing scenes involving activities like riding, skating, and handheld use.

SuperSmooth (Super Image Stabilization)

Off / On (Default setting: Off)

An upgraded in-app image stabilization mode that delivers ultras-mooth footage. To achieve this, the SuperSmooth stabilization algorithm is applied via the AKASO GO app. For SuperSmooth results, record the video with SuperSmooth enabled, then download the stabilized video via the AKASO GO app.

Note:

1. Basic Image Stabilization and SuperSmooth can't be enabled at the same time.
2. The two image stabilization modes cannot be activated when Time-lapse Video or Slow Motion Video is enabled or when the video resolution set to 720P120fps.
3. Basic Image Stabilization cannot be activated when Loop Recording is enabled or when the video resolution is set to 720P120fps.
4. Super Image Stabilization is available in all resolutions, while basic Image Stabilization only supports resolutions within 60fps.

Download SuperSmooth Videos

To get a SuperSmooth video, you need to record a video with SuperSmooth enabled, then download it from the app to your phone by following the steps below.

Step 1: Enable SupperSmooth on the app. To do this, connect the AKASO GO app to the camera, tap the settings icon in the upper right corner to access the app's settings screen, then tap "Image Stabilization" to select the "SuperSmooth" option.

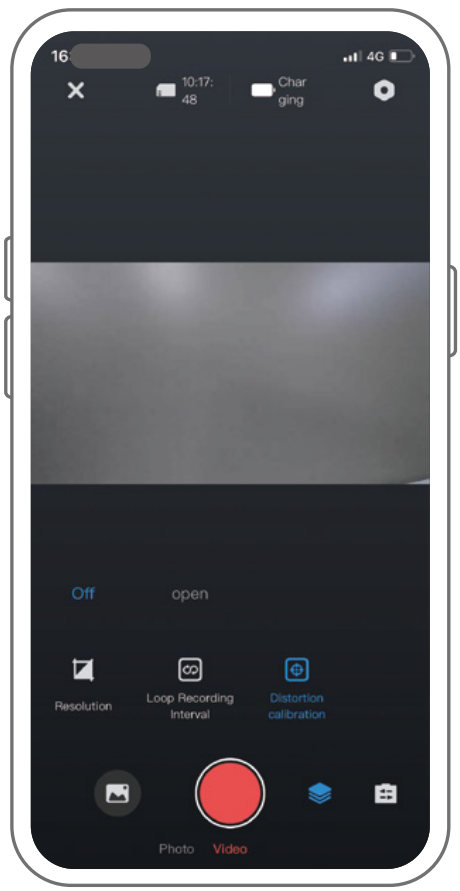

Step 1

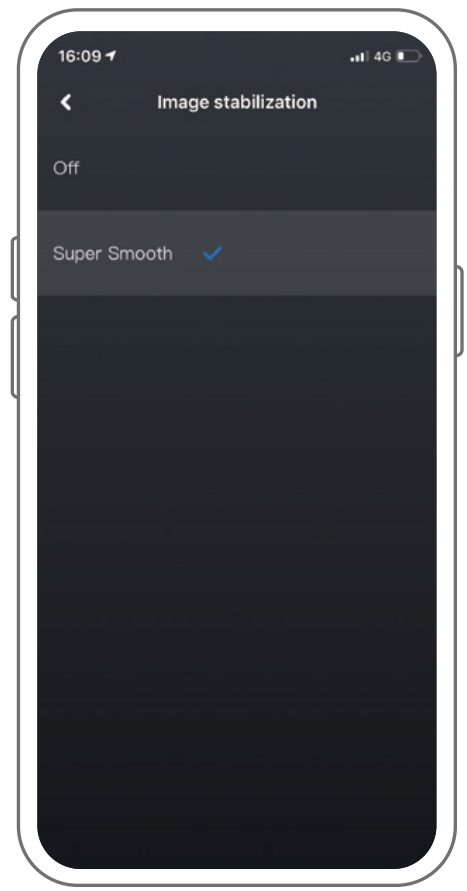

Step 1

Step 2: Press the Shutter button the camera or the app to start video recording.

Step 3: Tap the Album icon in the bottom left corner to enter the playback screen, and select the video with the SuperSmooth icon.

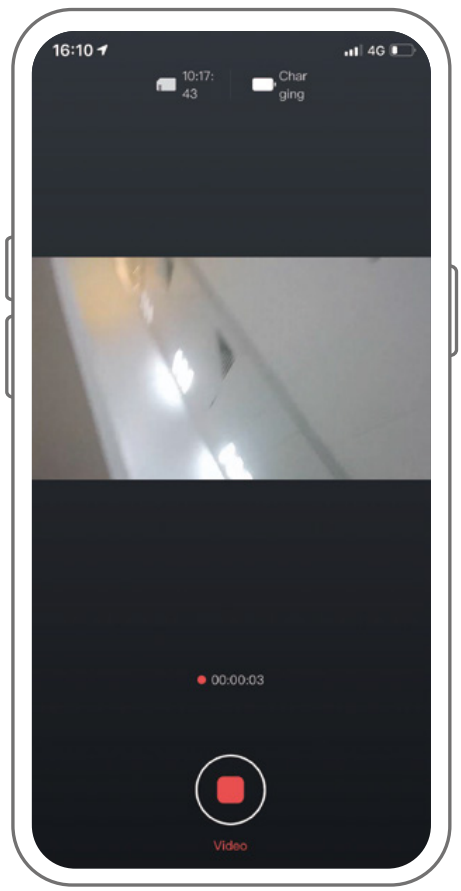

Step 2

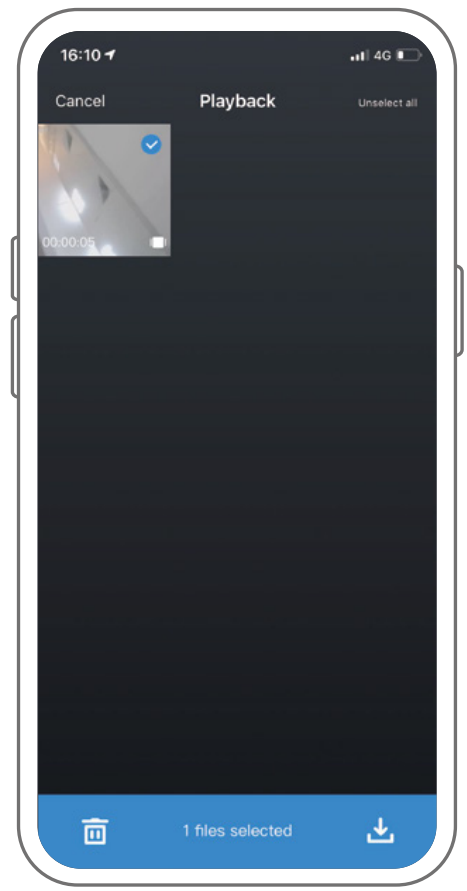

Step 3

Step 4: Tap the Download icon in the bottom right corner, and choose "SuperSmooth" to access the download screen. Patiently wait for the download progress to complete.
Step 5: Once it is downloaded successfully, the video is processed by the SuperSmooth Stabilization algorithm.
Step 6: Once processed, the video is stored in your phone's album.

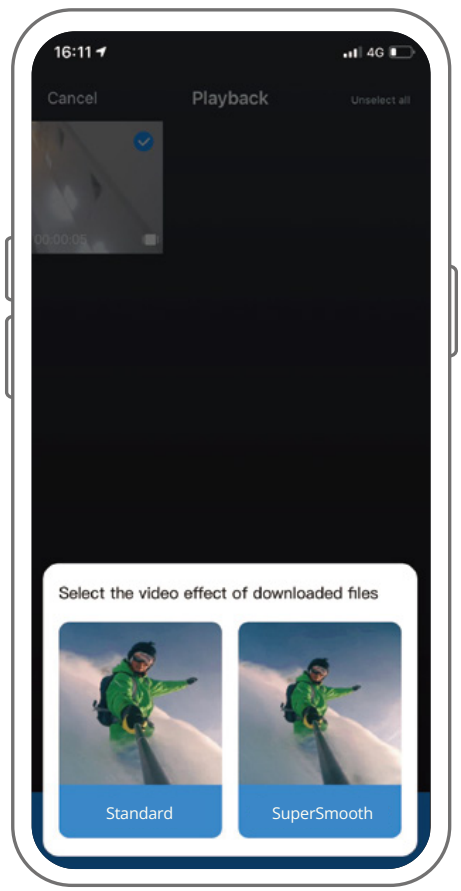

Step 5

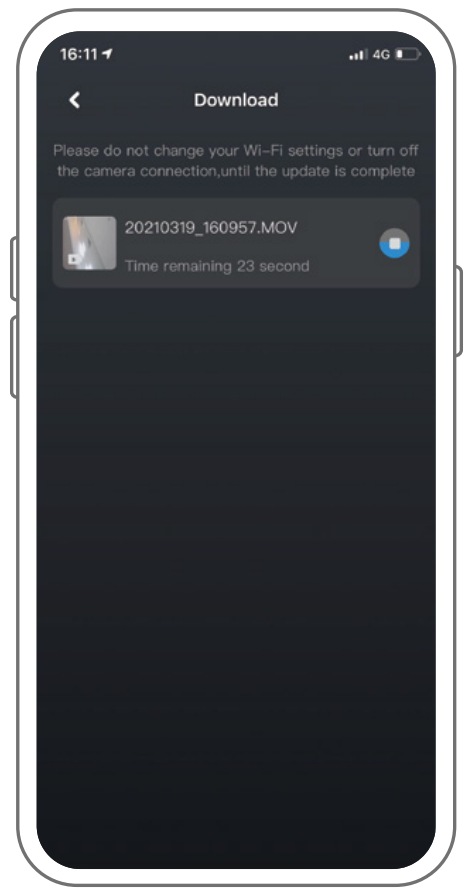

Step 6

Important Note:

1. Ensure to Enable SuperSmooth before recording videos.
2. Normal videos cannot be downloaded in the same way as SuperSmooth videos since they have not been processed by the SuperSmooth algorithm.

2. Photo Settings

Photo Modes	Photo Resolution
Photo	20MP, 16MP, 14MP, 10MP, 8MP, 5MP
Burst Photo	20MP, 16MP, 14MP, 10MP, 8MP, 5MP
Time Lapse Photo	20MP, 16MP, 14MP, 10MP, 8MP, 5MP

Photo

The default photo mode is Photo.

In Photo mode, press the Shutter button to take a photo at the preset photo resolution.

Burst Photo

3 shots / 7 shots / 15 shots / 30 shots (Default setting: 3 shots)

In this mode, press the Shutter button to continuously take photos at the set shot. This mode is perfect for capturing fast-moving activities.

Time Lapse Photo

3 Sec / 5 Sec / 10 Sec / 30 Sec / 1 Min (Default setting: 3 Sec)

In this mode, press the Shutter button to capture a series of photos at the set interval and choose the best one later.

System Setting

1. Fill Light

On / Off (Default setting: Off)

Fill Light can enhance the visibility of subjects in low-light conditions, allowing for high-quality photos or videos with better detail and clarity.

Tip: The black Keychain camera does not have the Fill Light feature.

2. Auto-rotate

On / Off (Default setting: Off)

This setting determines the orientation of your video or photos to help you prevent upside-down footage.

Note: The camera's user interface will be upside down with this feature enabled.

3. Auto Shut Down

Off / 1 Min / 3 Min / 5 Min (Default setting: 1 Min)

Auto Shut Down helps to power off camera after a period of inactivity to save battery life.

4. White Balance

Auto / Daylight / Cloudy / Tungsten / Fluorescent (Default setting: Auto)

White Balance fine-tunes the color temperature of your videos and photos, ensuring optimal color accuracy in both warm and cool lighting conditions.

5. Distortion Calibration

On / Off (Default setting: Off)

Distortion Calibration can correct the fisheye effect that can occur in wide-angle captures, providing images without distortion.

6. Date Stamp

Off / Date / Date & Time

The camera will add a watermark to your videos or photos per your setting.

7. Format microSD Card

Cancel / Confirm (Default setting: Cancel)

To keep your memory card in good condition, reformat it on a regular basis. Reformatting erases all of your content, so be sure to offload your photos and videos first.

8. Factory Reset

Cancel / Confirm (Default setting: Cancel)

This option resets the device to the original factory settings.

9. Remaining Battery

Check how much battery is left in your device.

10. Card Capacity

Check the card capacity and remaining space of your microSD card.

11. Version

Check the version of your Keychain camera.

Mounting Your Keychain Camera

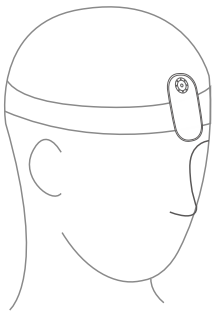

Mount the Keychain camera onto your head with the easy clip.

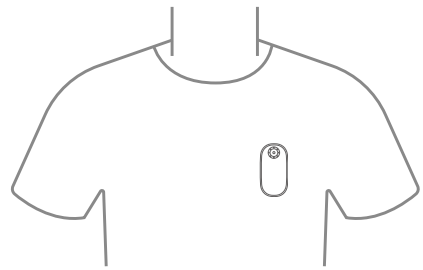

Mount the Keychain camera onto your body with the magnet base.

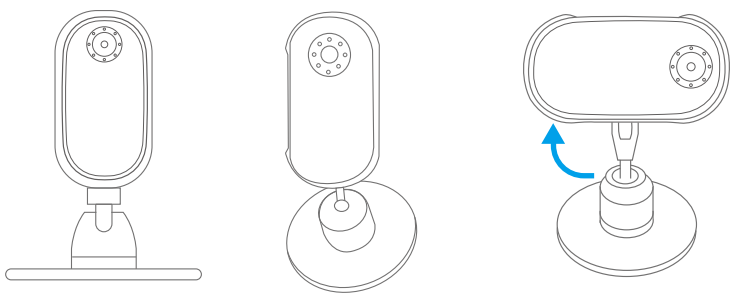

Tip: The rotation of this camera is limited to 90° clockwise. Please be cautious not to exert excessive force while rotating it, as this may cause the pivot stand to dislodge or become detached.

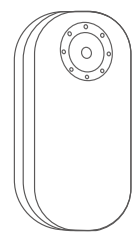

Carry-on Camera Case

Important

- The Pivot Stand can be connected to other compatible accessories using the 1/4" mounting screw.
- To maintain optimal magnetic force, avoid using the Keychain camera with thick clothing as it may weaken the magnetic attraction. Always test the stability of the Keychain camera before shooting.
- Individuals with cardiac pacemakers should refrain from wearing the Magnet Board.
- When utilizing the pivot stand and magnet base, ensure they are attached to dry, clean, and flat surfaces. Avoid attaching them to surfaces prone to strong vibrations.
- If the magnet base or pivot stand loses its stickiness, clean it with water and allow it to dry for re-use. After use, remember to re-apply their original covers to preserve stickiness. Avoid exposing the magnet base or pivot stand to high- or low-tempera ture environments.

Updating the Camera Firmware

OTA updates are of great importance to enhance your user experience, expand the camera's capabilities, and improve its performance and responsiveness. It is strongly recommended that you perform regular OTA updates via the AKASO GO app, as new upgrade packages for your camera are released frequently.
With your Keychain camera connected to the AKASO GO app, you will be notified whenever there is new firmware update available. Follow the provided instructions to complete the firmware update progress.
Tip: To confirm if the firmware is updated successfully, you can tap the "Version" option on the app to check the camera's version.

Q&A

Q: How long does it take to download a video to my smartphone?
A: The download time for your clips will vary based on the quantity and duration of the clips. For a single 30-second clip recorded at 4K/30fps, the estimated download time is approximately 35 seconds.
Q: Can my camera capture 360° video?
A: The Keychain camera can only capture 124° video.
Q: How long does the battery last?
A: The Keychain camera comes with a built-in 500mAh battery. The camera can work for around 60mins when fully charged. Note: The actual battery life may vary based on the environment and usage.
Q: Why does the camera not turn on?
A: Charge your camera for at least 30 minutes. If you still cannot power on your device, press and hold the reset button for 3 seconds to reset your camera.

Contact Us

For any inquiries about AKASO products, please feel free to contact us.
We will respond within 24 hours.

Email: cs@akasotech.com
Tel: (888) 466-9222 (US)
Web: www.akasotech.com

The microSD, microSDHC, microSDXC and SD marks and logos are trademarks of SD-3C, LLC.

USER MANUAL

AKASO Keychain Camera

AKASO

v1.5

コンテンツ目次

パッケージ詳細	23
Keychain カメラ	24
はじめに	25
スタンドアロン使用	26
操作の概要とカメラのステータス	27
AKASO GOアプリのダウンロード	30
AKASO GO アプリへの接続	30
AKASO GOアプリでKeychain カメラをカスタマイズ	32
Keychain カメラの取り付け	40
Keychainのソフトウェア更新	41
Q&A	41
お問い合わせ	42

パッケージ詳細



AKASO Keychain
カメラ*1

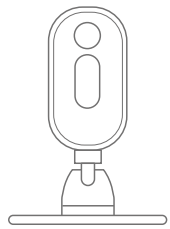

ピボットスタンドと
マウントベース * 1

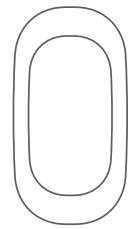

ポータブルケース
* 1

マグネットベース
* 1

ポータブルクリップ
* 1

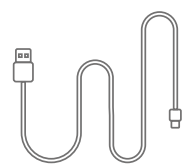

Type-C充電ケーブル
* 1

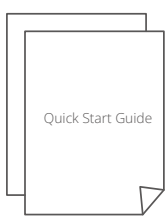

クイックスタートガイド
* 1

Keychain カメラ

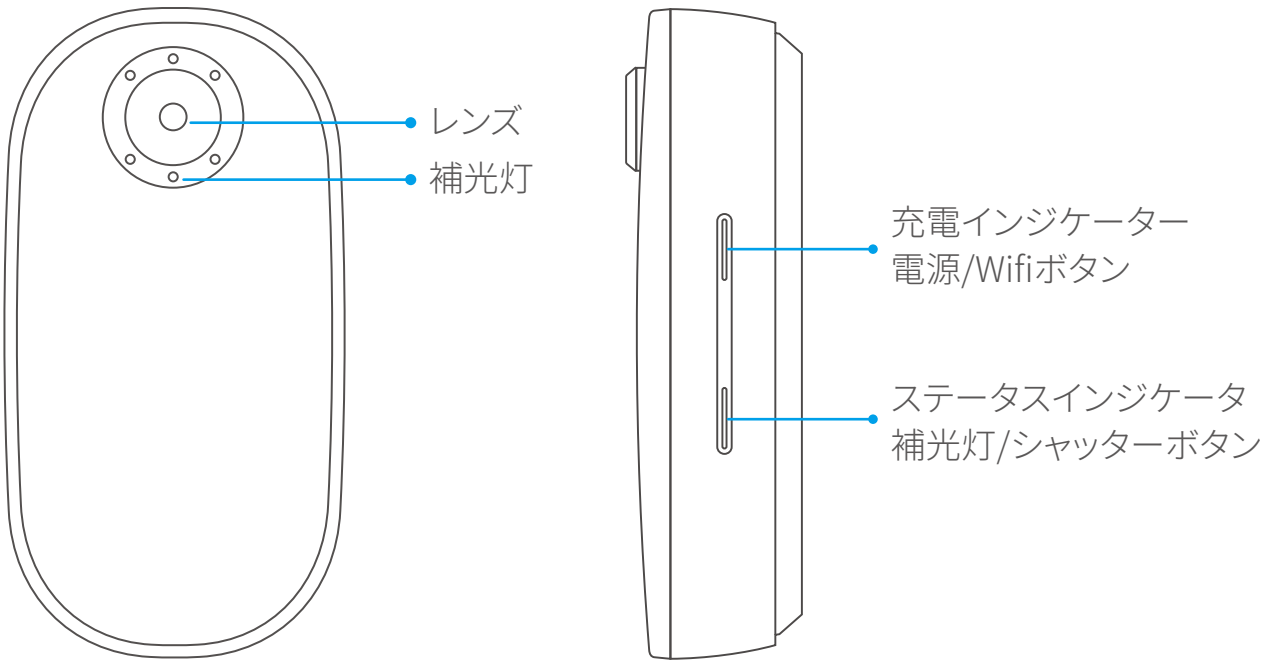

ヒント:黒のKeychainには補光機能はありません。

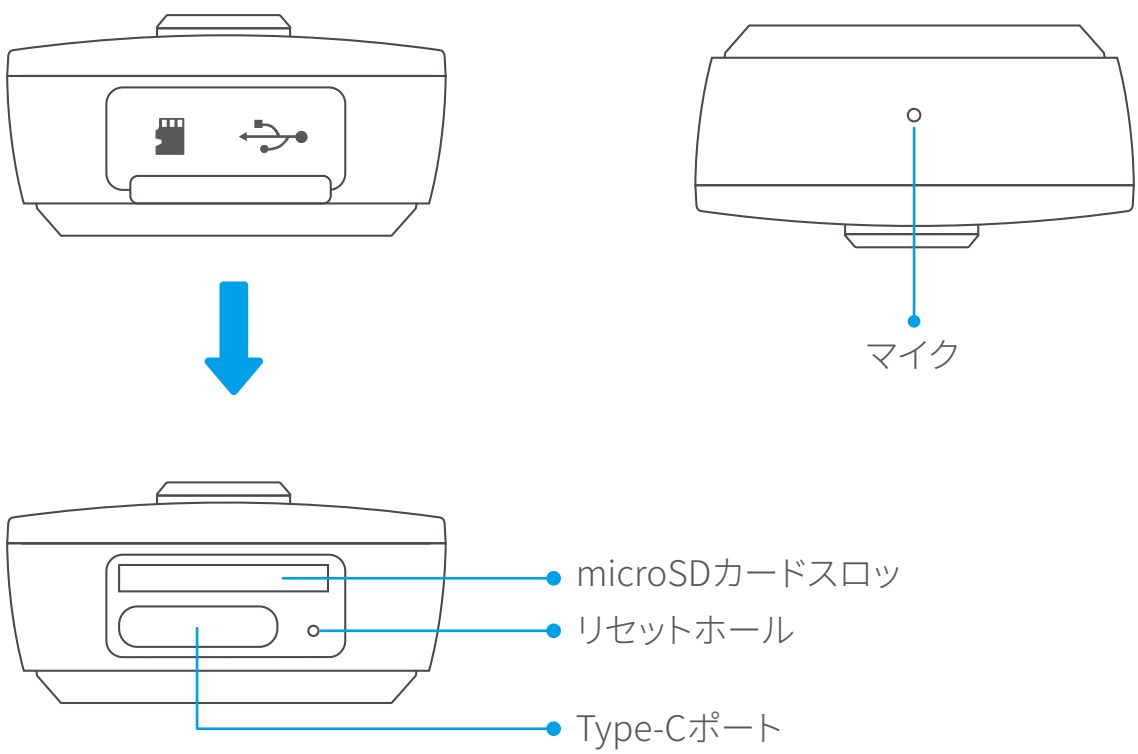

はじめに

1. キーチェーンカメラの充電

新しいカメラを最大限に活用するために、初めて使用する前に完全に充電することをおすす めします。

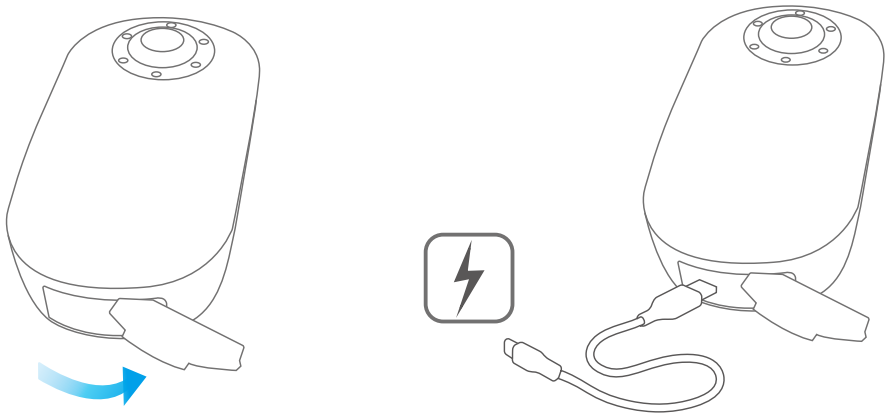

カメラを充電するには、充電ポートを表示するために充電カバーを開き、付属の USBケーブルを使用してカメラをUSBアダプターまたはコンピューターに接続しま す。完全に充電されたら、ケーブルを切断し、充電カバーがしっかりと固定されて いることを確認してください。充電中はインジケーターが赤色のままであり、完全 に充電されると消灯します。コンピューター経由でカメラを充電する場合、コン ピューターが電源に接続されていることを確認してください。ステータスライトが 点灯しない場合は、別のUSBポートを使用してください。 注意:バッテリーはカメラから取り外すことはできません。安全上のリスクがある ため、分解しないでください。

2. メモリーカードの取り付けまたは取り外し

- メモリーカード(別売り)を挿入するには、充電カバーを開いてメモリーカー ドスロットを表示し、指示された向きで挿入し、カバーを閉じます。注意:取り 付ける前にカメラの電源を切ってください。
- カードを取り外すには、爪で軽く内側に押し込み、カードがポップアウトしま す。

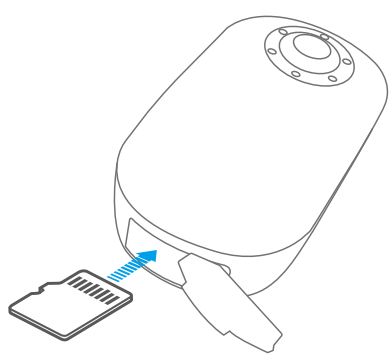

以下の要件を満たすSAMSUNG、Kingston、SanDiskなどのmicroSDカードを使用 してください:

• microSD, microSDHC or microSDXC.
• Class 10またはUHS-3 rating.
• 最大容量:64GB (FAT32).

注意:

1. 強い電流や磁場の近くでカードを使用しないでください。
2. カードが金属物に触れないようにし、押しつぶされたり曲がったり落ちたりしないように金属の道具を使用しないでください。
3. 腐食性のある物質から離れた乾燥した場所にカードを保管してください。
4. カードを正しい向きでカードスロットに挿入してください。
5. カードスロットに異物が挿入されていないことを確認してください。

スタンドアロン使用

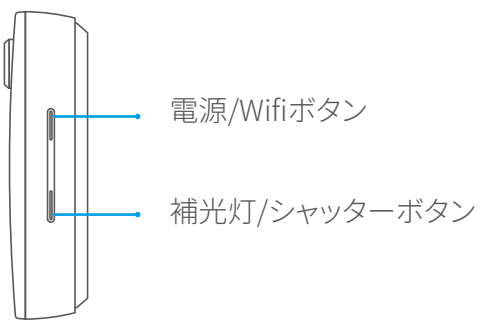

電源オン/オフ

電源のオン:カメラがオフの状態で、電源ボタンを押して長押しすると、カメラがオ ンになります。Keychainカメラは2秒間振動し、下部の青色のインジケーターが点灯 します。

電源のオフ:カメラがオンの状態で、電源ボタンを押して長押しすると、カメラがオ フになります。Keychainカメラは2回2秒間振動し、青色のインジケーターが消えま す。ヒント:事前に設定された自動シャットダウン時間内に操作が行われない場 合、Keychainカメラは自動的にシャットダウンします。

Wifiのオン/オフ

スタンバイモードで、Wifiボタンを押してWifiをオンにします。上部の黄色いインジケー ターがゆっくりと点滅します。 Wifiをオフにするには、Wifiボタンを押し、黄色いインジケーターが消えます。注意:カ メラのWifiがアクティブ化されているが1分以内にアプリと接続されない場合、自動的に 無効になります。カメラのWifiを再度アクティブ化してアプリに再接続してください。

補助光 オン/オフ

スタンバイモードで、フィルライトボタンを少なくとも2秒間押し続けると、フィル ライトがオンまたはオフになります。

シャッターボタンの使用

スタンバイモードで、シャッターボタンを押してビデオの録画を開始します。青色のインジケーターがゆっくりと点滅します。再度押してビデオの撮影を停止しま す。

ヒント: Keychainカメラは、オンにするとデフォルトでビデオモードになります。前回アプリで有効にされていたビデオモードも記憶することができます。

操作の概要とカメラのステータス

カメラステータス	オペレーション	カメラステータス変更	ライトの状態変化	カメラの振動	備考
電源オン	電源ボタンを長押しする	電源オフ → スタンバイ・モード	全消灯 → 青が点灯したまま	2秒間振動し続ける	
Wifiオン	電源ボタンを押す	スタンバイモード→Wifiはオンだが接続されていない	黄色消灯 → 黄色がゆっくり点滅	一度振動する	Wifi SSID: SNK-C_XXXX Wifi PWD: 1234567890
Wifiオートオフ	2分以内に電話アプリと連動しない。	2分以内にWifiに接続されない → スタンバイモード	黄色がゆっくり点滅 → 黄色消灯	一度振動する	
Wifiをオフにする	電源ボタンを押す	Wifiはオンだが、電話アプリに接続されていない → Wifiオフ	黄色がゆっくり点滅 → 黄色消灯	一度振動する	
無線LAN接続	携帯電話をカメラのWifiに接続する。	Wifiはオンだが、電話アプリには接続されていない → Wifiは接続されている	黄色がゆっくり点滅 → 黄色が点灯したまま	/	
接続時にWifiをオフにする	電源ボタンを押す	スマホアプリでWifi接続→Wifiオフ	黄色が点灯したまま → 黄色が消灯	一度振動する	

カメラステータス	オペレーション	カメラステータス変更	ライトの状態変化	カメラの振動	備考
写真 / バースト写真 / タイムラプス写真モードで	アプリの赤いシャッターアイコンをタップして写真を撮る	スマホアプリでWifi接続→撮影	青が点灯したまま → 青が素早く2回点滅	一度振動する	写真撮影は、アプリからのみ可能です。
ビデオ/ループ録画/タイムラプスビデオ/スローモーションビデオモードで	カメラのシャッターボタンを押すか、アプリの赤いシャッターアイコンをタップして録画開始	スタンバイ・モード → 録音	青が点灯したまま → 青がゆっくり点滅	一度振動する	カメラのビデオ・モードは、アプリで最後に有効にしたモードにデフォルト設定されます。例えば、アプリでループ録画を有効にした場合、アプリから切断すると、カメラのデフォルトはループ録画モードになります。タイムラプスビデオを録画したい場合は、アプリでタイムラプスビデオモードを有効にするだけです。
ビデオ録画に失敗	シャッターボタンを押す	スタンバイモード → 録画失敗	青が点灯したまま → 青が素早く3回点滅	3回振動	カードが挿入されていない、認識されていない、またはメモリが一杯の場合、カメラは録画に失敗することがあります。この問題を解決するには、推奨メモリーカードを挿入するか、データバックアップ後にカードをフォーマットするか、新しいカードに交換してください。
フィルライト点灯	フィルライトボタンを長押しするか、アプリで有効にしてください。	フィルライト点灯	フィルライト消灯 → フィルライト点灯のまま	/	黒のKeychainには補光機能はありません。
フィルライトを消す	フィルライトボタンを長押しするか、アプリで無効にする。	フィルライト消灯	フィルライト点灯 → フィルライト消灯	/	
充電	カメラをUSBケーブルに接続する	カメラは充電中です。	上部の赤が点灯	/	

カメラステータス	オペレーション	カメラステータス変更	ライトの状態変化	カメラの振動	備考
アプリでのファームウェアアップデート	アプリ上のプロンプトまたは指示に従って、ファームウェアのアップデートを行う。	Wifi接続→ファームウェア更新中→完了次第自動電源オフ	進行中は下部の青が早く点滅 → 完了すると青が消える	走行中の振動がない	ファームウェアのアップグレードを行う前に、カメラが推奨カードを挿入した状態で50%まで充電されていることを確認してください。バッテリーの低下による損傷からファームウェア・アップデート・パッケージを保護するため、カメラを接続したままにしておくことをお勧めします。
オートパワーオフ	/	スタンバイモード時は無操作→電源オフ	ブルーが残る → ブルーブラックアウト	2秒間振動し続ける	アプリでオートパワーオフが有効になっていることを確認します。
ローバッテリー	/	どんな状況でも電源オフ	青と黄色のライトが素早く点滅 → ライトがブラックアウト	2回振動 → 2秒間振動し続ける	バッテリーの寿命を最大化するには、解像度とフレームレートを下げて撮影し、不要なときはWifiやフィルライトをオフにします。
電源オフ	電源ボタンを長押しする	カメラの電源オフ	消灯	2秒間振動し続ける	

AKASO GOアプリのダウンロ

カメラをアプリと同期させるには、「AKASO GO」という名前でApp Store(iOS)または Google Play(Android)からAKASO GOアプリをダウンロード してください。

AKASO GO アプリへの接続

Keychainカメラの設定やステータスの表示には、アプリとの接続が必要です。アプ リの機能にはカメラのコントロール、ライブプレビュー、再生、ダウンロード、設 定などがあります。以下の手順に従ってカメラをAKASO GOアプリに接続します。

1. スタンバイモードで、電源ボタンを押してデバイスのWifiをオンにします。
2. 携帯電話のWifi設定ページに移動し、リストから"SNKCXXXX"という名前のWifi SSIDを見つけてタップし、接続にはパスワード1234567890を入力します。
3. AKASO GOアプリを開き、「デバイス」→「デバイスの追加」をタップし、接続するためにリストから「Keychain」を選択します。
4. 「上記の操作は確認されました」とチェックを入れ、「ライブプレビュー」をタップします。
5. カメラは数秒でAKASO GOアプリに接続されます。

注意：提供されたスクリーンショットは参考用です。

デバイス
デバイスを追加
重宝な瞬間を記録
AKASO素晴らしい瞬間
発見
切り取る
デバイス
サプライズ
私の

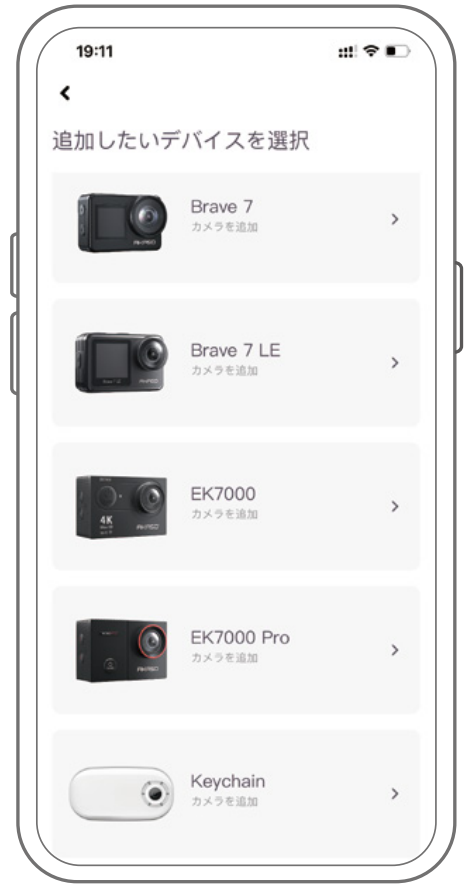
19:11
追加したいデバイスを選択
Brave 7
カメラを追加
Brave 7 LE
カメラを追加
EK7000
カメラを追加
EK7000 Pro
カメラを追加
Keychain
カメラを追加

19:11
AKASO Keychain
重宝な瞬間を記録
アニメーションプロンプトに従って、デバイスのWiFi接続をオンにしてください
ステップ1: シャットダウン状態で、ブルーライトが点灯するまでを押し続けます。
ご注意
Keychainの黄ランプと青ランプが交互に点滅したままの状態であれば、青ランプが点灯するまで任意のキーを短く押してください。
上記の操作を確認しました
ライブプレビュー

キーチェーンをアプリに正常に接続した後は、カメラのステータスを表示したり、撮影モードを切り替えたり、写真やビデオを撮影したり、設定を構成したり、録画ファイルにアクセスしたり、OTAアップグレードを行ったりすることができます。

ご注意:上記のビデオモード画面は、説明のみを目的としています。

AKASO GOアプリでKeychain カメラをカスタマイズ

1. ビデオ設定

ビデオモード	ビデオ解像度
ビデオ	4k30fps, 2.7k30fps, 2.7k60fps, 1080P60fps, 1080P30fps, 720P120fps, 720P60fps
ループ録画	4k30fps, 2.7k30fps, 2.7k60fps, 1080P60fps, 1080P30fps, 720P120fps, 720P60fps
タイムラプス	4k30fps, 2.7k30fps, 2.7k60fps, 1080P60fps, 1080P30fps, 720P120fps, 720P60fps
スローモーション	1080P60fps, 720P120fps, 720P60fps

ビデオモード

カメラは、電源を入れるとデフォルトでビデオモードになります。このモードでは、シャッターボタンを押して事前に設定された解像度とフレームレートで通常のビデオを録画します。再度シャッターボタンを押すと録画が停止します。

注意: 高解像度とフレームレートの環境でのビデオ撮影はより多くの電力を消費します。

ループ録画時間

1分/3分/5分(デフォルト設:1分)

このモードでは、シャッターボタンを押して設定された長さのビデオを録画します。MicroSDカードがいっぱいになると、カメラは自動的に最も古いビデオを削除して録画を続けます。例えば、「1分」オプションが選択されている場合、カメラは1 分の長さのビデオクリップを作成します。メモリがいっぱいになると、1分のクリップが削除されます。

タイムラプスビデオ

1秒 / 3秒 / 5秒 / 10秒 / 30秒 / 1分(デフォルト設定:1秒)

タイムラプスビデオモードでは、シャッターボタンを押して設定された間隔でフレームをキャプチャしてビデオクリップを作成します。

注意: タイムラプスビデオは音声なしでキャプチャされます。

スローモーションビデオ

このモードでは、シャッターボタンを押して設定された解像度と速度でスローモーションビデオを録画します。ビデオは再生速度30fpsで録画され、再生時に魅力的なスローモーション効果が得られます。

風切り音低減

オフ / オン(デフォルト設定:オフ)

風切り音低減をオンにすると、高速移動中に生じる風切り音を最小限に抑えることができます。

手ぶれ補正モード:基本的な手ぶれ補正/SuperSmooth/オフ

• オフ:手ぶれ補正オフにします。

基本的な手ぶれ補正(EIS 2.0)

オフ / オン(デフォルト設定:オフ)。手ぶれ補正は、レンズの振動を効果的に補正し、滑らかでクリアなビデオを実現しま す。この機能は、乗馬やスケート、手持ち撮影などの活動を含むシーンの撮影に最適 です。

• SuperSmooth(スーパー手ぶれ補正)

• オフ / オン(デフォルト設定: オフ)

• 超滑らかな映像を提供するアップグレードされたアプリ内の手ぶれ補正モードです。これには、AKASO GOアプリを介してSuperSmoothな手ブレ補正アルゴリズムが 適用されます。SuperSmoothな結果を得るためには、SuperSmoothを有効にしてビデ オを録画し、その後AKASO GOアプリを使用して安定化されたビデオをダウンロード してください。

注意:

1. 基本的な手ぶれ補正とSuperSmoothは同時に有効にできません。
2. タイムラプスビデオまたはスローモーションビデオが有効になっている場合 や、ビデオ解像度が720P120fpsに設定されている場合、手ぶれ補正の2つのモードを 活性化することはできません。
3. ループ録画が有効になっている場合や、ビデオ解像度720P120fpsに設定されてい る場合、基本的な画像手ブレ補正を活性化することはできません。
4. SuperSmooth はすべての解像度で利用可能ですが、基本的な手ぶれ補正は60fps以内の解像度のみサポートされています。

SuperSmoothビデオのダウンロード:

SuperSmoothビデオを取得するには、まずSuperSmoothを有効にしてビデオを録画 し、次に以下の手順に従ってアプリから携帯電話にダウンロードする必要があります。
ステップ1 : アプリでSuperSmoothを有効にします。これを行うには、AKASO GOアプリを カメラに接続し、アプリの設定画面にアクセスするために右上隅の設定アイコンをタッ プし、「手ぶれ補正」をタップして「SuperSmooth」オプションを選択します。 ステップ2 :カメラまたはアプリでシャッターボタンを押してビデオ録画を開始しま す。

ステップ1

ステップ1

ステップ2 :カメラまたはアプリでシャッターボタンを押してビデオ録画を開始しま す。
ステップ3 : 再生画面に入るために左下隅のアルバムアイコンをタップ し、SuperSmoothアイコンの付いたビデオを選択します。
ステップ4 : ダウンロード画面にアクセスするために右下隅のダウンロードアイコンを タップし、「SuperSmooth」を選択します。ダウンロードの進行状況が完了するまでお 待ちください。

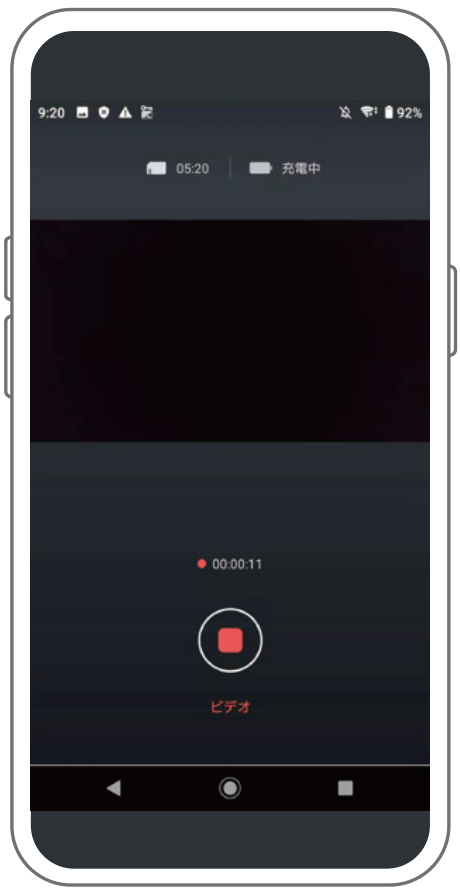

ステップ2

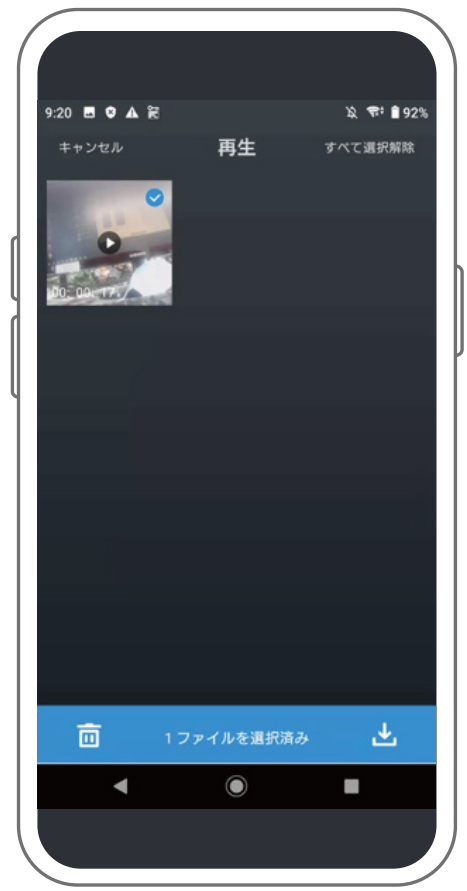

ステップ3

ステップ5 : 正常にダウンロードされると、ビデオはSuperSmooth補正アルゴリズム によって処理されます。
ステップ6 : 処理が完了したら、ビデオは携帯電話のアルバムに保存されます。

ステップ5

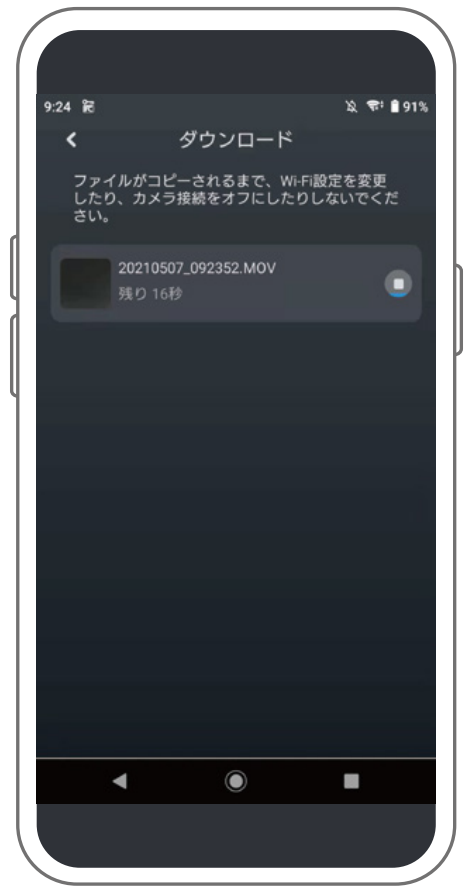

ステップ6

注意事項:

スーパー手ブレ補正機能で撮影したビデオをダウンロードする際に、次の事項を確認してください。

(1) ビデオを録画する前に必ずSuperSmoothを有効にしてください。

(2) SuperSmoothアルゴリズムで処理されていない通常のビデオは、SuperSmoothビデオと同じ方法でダウンロードすることはできません。

2. 写真設定

写真モード	写真解像度
写真	20MP, 16MP, 14MP, 10MP, 8MP, 5MP
連写	20MP, 16MP, 14MP, 10MP, 8MP, 5MP
タイムラプス	20MP, 16MP, 14MP, 10MP, 8MP, 5MP

写真撮影

デフォルトの写真モードは写真です。写真モードでは、シャッターボタンを押して事前に設定された写真解像度で写真を 撮影します。

連写撮影

3枚 / 7枚 / 15枚 / 30枚(デフォルト設定:3枚)

このモードでは、シャッターボタンを押して設定された枚数で連続的に写真を撮影 します。このモードは高速動作を捉えるのに最適です。

タイムラプス写真

3秒 / 5秒 / 10秒 / 30秒 / 1分(デフォルト設定: 3秒)

このモードでは、シャッターボタンを押して設定された間隔で一連の写真を撮影 し、後から最も良い写真を選ぶことができます。

3. システム設定

補助光

オン / オフ(デフォルト設定:オフ)

フィルライトは、低照明条件下で被写体の可視性を向上させることができます。より詳細でクリアな高品質の写真やビデオを撮影することができます。

ヒント: ブラックキーチェーンカメラにはフィルライト機能はありません。メモ:ブラックタイプは補助光をサポートしていません。

自動回転

オン / オフ(デフォルト設定: オフ)

フィルライトは、低照明条件下で被写体の可視性を向上させることができます。よ り詳細でクリアな高品質の写真やビデオを撮影することができます。

ヒント: ブラックキーチェーンカメラにはフィルライト機能はありません。

自動シャットダウン

オフ/1分 / 3分/ 5分（デフォルト設定：1分）

自動電源オフは、一定時間の非活動後にカメラを自動的に電源オフにすることで、バッテリー寿命を節約します。

ホワイトバランス

自動/昼光/曇り/タングステン/蛍光灯（デフォルト設定：自動）

ホワイトバランスは、ビデオや写真の色温度を微調整し、暖色と寒色の照明条件下で最適な色の正確さを確保します。

歪み補正

オフ/オン（デフォルト設定：オフ）

歪み補正は、広角撮影で発生する魚眼効果を修正することができます。歪みのない画像を提供します。

日付スタンプ

オフ、日付、日付/時刻

設定に応じて、カメラはビデオや写真にウォーターマークを追加します。

microSDカードをフォーマット

キャンセル/確認（デフォルト設定：キャンセル）

メモリーカードを良好な状態に保つために、定期的に再フォーマットしてください。再フォーマットすると、すべてのコンテンツが削除されるため、まず写真やビデオをバックアップしてください。

出荷時設定に戻す

キャンセル/確認（デフォルト設定：キャンセル）

このオプションは、デバイスを元の出荷時の設定にリセットします。

バッテリー残量

デバイスの残りのバッテリー容量をチェックします。

カード容量

microSDカードの容量と残りの空き容量を確認します。

バージョン

キーチェーンカメラのバージョンを確認します。

Keychain カメラの取り付け

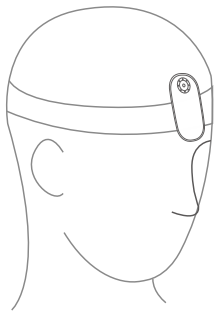

簡単なクリップを使用して、キーチェーンカメラを頭に取り付けます。

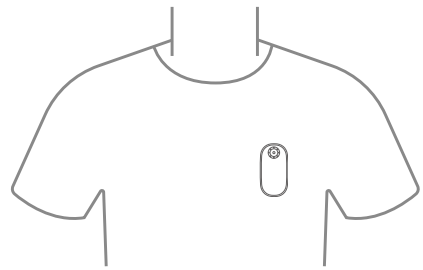

Keychainカメラを磁石の台座で体に取り付ける。

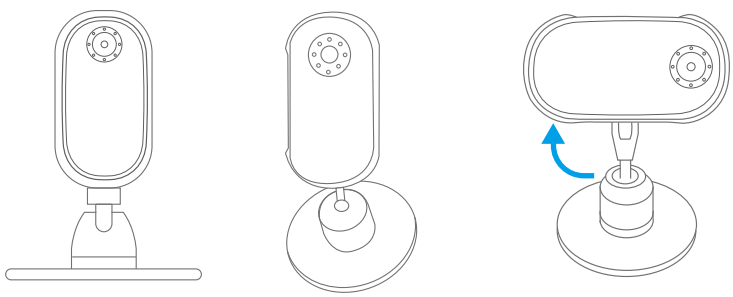

ヒント：このカメラの回転は時計回りに90°まで制限されています。回転させる際に過度な力を加えないよう注意してください。これによってピボットスタンドが外れたり取り外されたりする可能性があります。

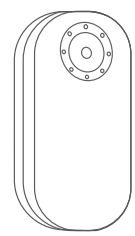

ポータブルケース

ポイント

- 1/4"取り付けネジを使用して、ピボットスタンドを他の互換性ありのアクセサリに接続できます。
- 厚手の服はボードの磁力を弱める可能性があるため、厚手の服でKeychainカメラを使用しないでください。撮影する前に、必ずKeychainカメラの安定性をテストしてください。
- 心臓ペースメーカーを装着している人は、マグネットボードを装着しないでください。
- ピボットスタンドとスティッキーベースを使用する場合は、乾いた清潔で平らな面に取り付けてください。振動の強い面への取り付けは避けてください。
- スティッキーベースまたはピボットスタンドの粘着性が失われた場合は、水で洗浄し、乾燥させて再利用してください。使用後、粘着性を維持するために、元のカバーを再度貼り付けてください。スティッキーベースまたはピボットスタンドを高温または低温環境に置かないでください。

Keychainのソフトウェア更新

KeychainカメラをAKASO GOアプリに接続すると、新しいファームウェアのアップ デートが利用可能になるたびに通知が表示されます。提供された手順に従って ファームウェアのアップデートを完了させてください。

ヒント:ファームウェアが正常に更新されたかどうかを確認するには、アプリの「バー ジョン」オプションをタップしてカメラのバージョンを確認できます。

Q&A

Q: スマートフォンにビデオをダウンロードするのにどれくらい時間がかかりま すか?

A: ビデオクリップのダウンロード時間は、クリップの数量と長さによって異なります。4K / 30fpsで録画された30秒間の単一のクリップの場合、推定されるダウンロード時間は約35秒です。

Q：カメラで360°のビデオを撮影できますか？

A：Keychainカメラは124°のビデオしか撮影できません。

Q：バッテリーはどれくらい持ちますか？

A：Keychainカメラには内蔵の500mAhバッテリーが付属しています。充電が完全に満タンの状態では、約60分間使用することができます。注意：実際のバッテリー寿命は環境や使用方法によって異なる場合があります。

Q：なぜカメラが起動しないのですか？

A：カメラを少なくとも30分間充電してください。それでもデバイスの電源が入らない場合は、リセットボタンを3秒間押し続けてカメラをリセットしてください。

お問い合わせ

AKASO製品に関する何かご不明な点がございましたら、お気軽に弊社までご連絡ください。絶対、24H以内回答いたします。

Email: cs@akasotech.com

公式サイト：www.akasotech.com

microSD、microSDHC、microSDXC、SDのマークとロゴは、SD-3C、LLCの商標です。